# Product manual 5343 2-wire level transmitter





















TEMPERATURE | I.S. INTERFACES | COMMUNICATION INTERFACES | MULTIFUNCTIONAL | ISOLATION | DISPLAY



# 6 Product Pillars to meet your every need

### Individually outstanding, unrivalled in combination

With our innovative, patented technologies, we make signal conditioning smarter and simpler. Our portfolio is composed of six product areas, where we offer a wide range of analog and digital devices covering over a thousand applications in industrial and factory automation. All our products comply with or surpass the highest industry standards, ensuring reliability in even the harshest of environments and have a 5-year warranty for greater peace of mind.



Our range of temperature transmitters and sensors provides the highest level of signal integrity from the measurement point to your control system. You can convert industrial process temperature signals to analog, bus or digital communications using a highly reliable point-to-point solution with a fast response time, automatic self-calibration, sensor error detection, low drift, and top EMC performance in any environment.



We deliver the safest signals by validating our products against the toughest safety standards. Through our commitment to innovation, we have made pioneering achievements in developing I.S. interfaces with SIL 2 Full Assessment that are both efficient and cost-effective. Our comprehensive range of analog and digital intrinsically safe isolation barriers offers multifunctional inputs and outputs, making PR an easy-to-implement site standard. Our backplanes further simplify large installations and provide seamless integration to standard DCS systems.



We provide inexpensive, easy-to-use, future-ready communication interfaces that can access your PR installed base of products. All the interfaces are detachable, have a built-in display for readout of process values and diagnostics, and can be configured via push-buttons. Product specific functionality includes communication via Modbus and Bluetooth and remote access using our PR Process Supervisor (PPS) application, available for iOS and Android.



Our unique range of single devices covering multiple applications is easily deployable as your site standard. Having one variant that applies to a broad range of applications can reduce your installation time and training, and greatly simplify spare parts management at your facilities. Our devices are designed for long-term signal accuracy, low power consumption, immunity to electrical noise and simple programming.



Our compact, fast, high-quality 6 mm isolators are based on microprocessor technology to provide exceptional performance and EMC-immunity for dedicated applications at a very low total cost of ownership. They can be stacked both vertically and horizontally with no air gap separation between units required.



Our display range is characterized by its flexibility and stability. The devices meet nearly every demand for display readout of process signals, and have universal input and power supply capabilities. They provide a real-time measurement of your process value no matter the industry, and are engineered to provide a user-friendly and reliable relay of information, even in demanding environments.

# 2-wire level transmitter 5343

## Table of contents

Application	4
Technical characteristics	4
Mounting / installation	4
Applications	4
Order	5
Electrical specifications	5
Connections	7
Block diagram	7
Programming	8
Mechanical specifications	8
Mounting of sensor wires	8
Configuration of potentiometer input	9
Activation of embedded linearisations	10
ATEX Installation Drawing - 5343A	11
ATEX Installation Drawing - 5343B	12
IECEx Installation Drawing - 5343A	14
IECEx Installation Drawing - 5343B	15
FM Installation Drawing - 5343B	17
INMETRO Installation Drawing - 5343A	19
INMETRO Installation Drawing - 5343B	20
Document history	22

## 2-wire level transmitter 5343

- Potentiometer or Ohmic input
- Programmable sensor error value
- High measurement accuracy
- Unique process calibration function
- Programmable via standard PC

#### **Application**

- Conversion of resistance variation to standard analog current signals, e.g. from Ohmic level sensors or valve positions.
- User-defined linearization function can be activated.


#### Technical characteristics


- Within a few seconds the user can program PR5343 to measure within the defined Ohmic values.
- Continuous check of vital stored data for safety reasons.
- The transmitter is protected against polarity reversal.
- PR5343 is configured to the current task by way of a PC, the PRelevel software and the communications interface Loop Link.
- The PRelevel configuration tool included in the PReset software has been developed specifically for the configuration of level applications. Among other things, it contains a function for "on line" measurement of input span as well as a linearization function for volume linear output from horizontal cylindrical tanks.

#### Mounting / installation

 For DIN form B sensor head mounting. In non-hazardous areas the 5343 can be mounted on a DIN rail with a special fitting.

## **Applications**

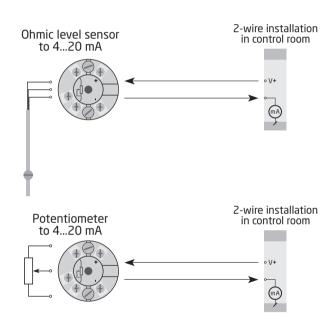

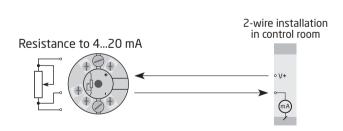

#### Order

Туре	Version	
5343	Standard	: A
	ATEX, FM, IECEx & INMETRO : B	

#### **Electrical specifications**

#### **Environmental conditions:**

**Mechanical specifications:** 

 Screw terminal torque.
 0.4 Nm

 Vibration.
 IEC 60068-2-6

 2...25 Hz.
 ±1.6 mm

 25...100 Hz.
 ±4 g

#### Common specifications:

Supply voltage, DC

Internal power dissipation

 Standard.
 25 mW...0.8 W

 ATEX, FM, IECEx & INMETRO.
 25 mW...0.7 W

 Voltage drop
 8.0 VDC

 Warm-up time.
 5 min.

 Programming
 Loop Link

 Signal / noise ratio.
 Min. 60 dB

 Response time (programmable)
 0.33...60 s

 Signal dynamics, input
 19 bit

Accuracy, the greater of general and basic values:

General values		
Input type	Absolute accuracy	Temperature coefficient
Lin. R	≤ ±0.1% of span	≤ ±0.01% of span / °C

Basic values		
Input type	Basic accuracy	Temperature coefficient
Lin. R	≤ ±0.05 Ω	≤ ±0.002 Ω / °C

#### Electrical specifications, input:

Linear resistance input:

#### Output:

**Current output:** 

 Signal range.
 4...20 mA

 Min. signal range.
 16 mA

 Updating time
 135 ms

Sensor error detection:

 Programmable
 3.5...23 mA

 Namur NE43 Upscale
 23 mA

 Namur NE43 Downscale
 3.5 mA

Of span = Of the presently selected range

Observed authority requirements:

 EMC.
 2014/30/EU

 RoHS.
 2011/65/EU

 ATEX.
 2014/34/EU

 EAC.
 TR-CU 020/2011

Marine approval:

DNV-GL, Ships & Offshore . . . . . . . . . . . . . . . . . Standard for Certification No. 2.4

Ex / I.S. approvals:

ATFX:

 5343A
 KEMA 10ATEX0004 X

 5343B
 KEMA 03ATEX1538 X

 IECEx
 DEK 13.0036 X


 FM
 FM17US0013X

 INMETRO
 DEKRA 16.0014 X


 EAC Ex TR-CU 012/2011
 RU C-DK.GB08.V.00410

## **Connections**


## Input:

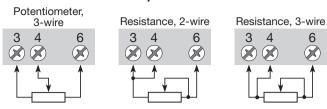

## Output:

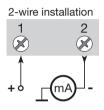


## **Block diagram**

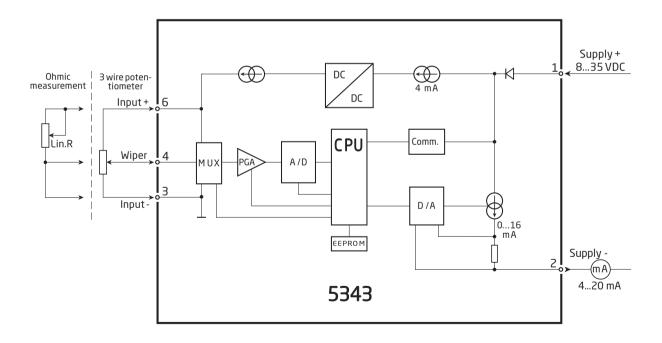



## **Programming**

- Loop Link is a communications interface that is needed for programming 5343.
- For programming please refer to the drawing below and the help functions in PReset.
- Loop link is not approved for communication with modules installed in harzardous (Ex) areas.

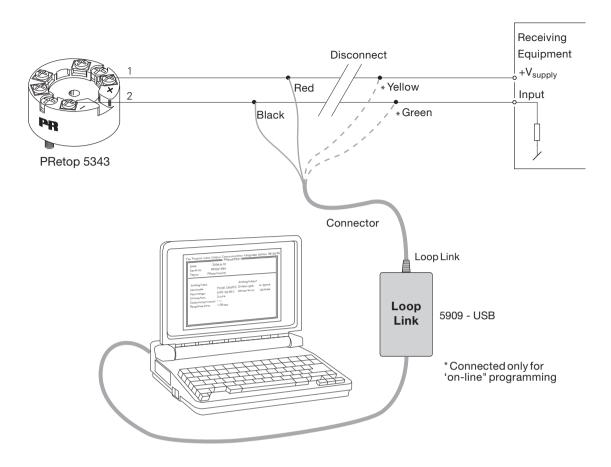


#### **Mechanical specifications**

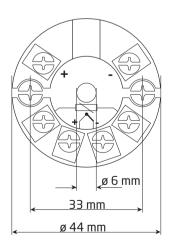

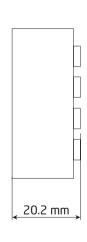

#### Mounting of sensor wires

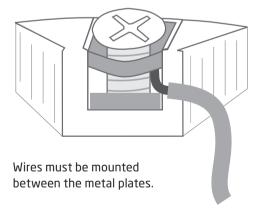

### Configuration of potentiometer input

In an Ohmic level sensor the resistance value changes when a magnetic floater activates the reed contacts in the sensor. This means that it is usually not possible to make use of the entire level sensor as input span. When PR5343 is used with a potentiometer input, the PRelevel software contains the following special functions for configuration:

[Calibration Password] is 4711. This password should be entered at program start. The only parameters which can be changed without entering this password are Input Low and High for the potentiometer input. The menu item is located under Tools > Options.

Please pay special attention to the text in the 'Information' window during transmission. When the configuration cannot be sent to the transmitter due to lack of password, the following text will appear: 'Operation aborted.' 'Configuration NOT transmitted to the device.'

The following description of configuration with potentiometer input is based on figure 1. Please note that the PRelevel software only comes in an English-language version. Therefore the menu texts are represented here as they are seen on the screen. First choose the [Input] tab:

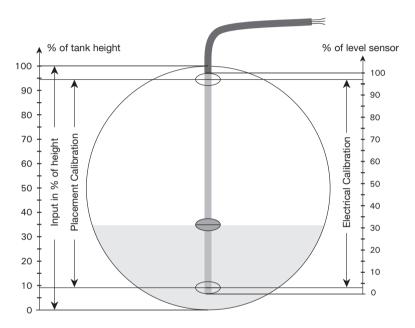


Figure 1, cross section of horizontal cylindrical tank

**[Electrical Calibration]** Enter the range to be detected by the connected potentiometer or let PRelevel measure the available range. The transmitter must be connected to the communications interface before the values can be measured. The values in figure 1 are Low = 3% og High = 97%.

[Placement Calibration] Enter the placement of the 'Electrical Calibration' Low and High points of the level sensor in relation to the height of the tank. These values are used for calculation of linearization values and for calculation of 0 and 100% height.

The values in figure 1 are Low = 9% and High = 94%.

[Input] Enter the desired input span in relation to the height. When input Low and High are selected as 0 and 100%, the input can never go below 9% and above 94% due to the design and mounting of the level sensor. If the output span is 4...20 mA, the output will only vary between 5.44...19.04 mA.

The values in figure 1 are Low = 0% and High = 100%.

#### Activation of embedded linearisations

The PRelevel software contains embedded linearization functions for horizontal cylindrical tanks and spherical tanks. The linearization functions can be activated as follows:

**Custom input type:** In order to gain access to a customer-defined linearization, the selection in the **[General Type]** input box must end with the text 'Custom' and the **[Calibration Password]** 4711 must be entered.

**Activation of linearization:** Choose the [Options] tab in the PRelevel 5343 window. If one of the embedded linearizations is to be used, the selection in the **'Linearization'** window must be 'Polynomial.....(Relative)' in order to retrieve the most accurate linearization files. The files are retrieved by way of the following menus: **>Specify** + select **>File > Open** in the main menu + select **>File name >Open** in the file dialogue box.

User-defined linearization: It is possible to enter specific linearization tables in the >Specify menu.



WWW.PRELECTRONICS.COM

## ATEX Installation drawing



For safe installation of 5343A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 10ATEX 0004X

Marking

II 3 G Ex nA [ic] IIC T4 ... T6 Gc II 3 G Ex ic IIC T4...T6 Gc II 3 D Fx ic IIIC Dc

Standards EN 60079-0: 2012, EN 60079-11: 2012, EN 60079-15: 2010

T4: -40 ≤ Ta ≤ 85°C Terminal: 1,2 Terminal: 1,2 Terminal: 3,4,6 T6:  $-40 \le Ta \le 60$ °C

Ex nA [ic] Ex nA Ex ic

> Uo: 5V Umax ≤ 35 VDC Ui = 35 VDC lo: 4 mA Ii = 110 mAPo: 20 mW  $Li = 10 \mu H$ Lo: 900 mH Ci = 1.0 nF

Co: 1000 µF

#### Special conditions for safe use.

For type of protection Ex nA, the transmitter shall be mounted in a metal enclosure providing a degree of protection of at least IP54 according to EN60529.

For use in the presence of combustible dusts the transmitter shall be mounted in an enclosure providing a degree of protection of at least IP6X in accordance with o EN60529, the surface temperature of the outer enclosure is 20 K above the ambient temperature

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

Version Revision Revision date: Page: 2013-08-07 V2R0 1/1



WWW.PRELECTRONICS.COM

## ATEX Installation drawing



For safe installation of 5343B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.


Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 03ATEX 1538 X

Marking

II 1 G Ex ia IIC T4...T6 Ga
II 1 D Ex ia IIIC Da
II 1 M Ex ia I Ma

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-26 : 2007,

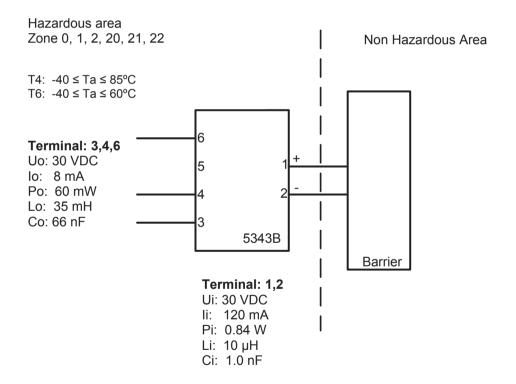

Revision date: Version Revision Page: 2013-08-07 V2R0 1/2



#### WWW.PRELECTRONICS.COM

#### Installation notes.

In a potentially explosive gas atmosphere, the transmitter shall be mounted in an enclosure in order to provide a degree of protection of at least IP20 according to EN60529.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment of category 1 G, 1 M or 2 M, and if the enclosure is made of aluminum, if must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the enclosure is made of non-metallic materials, electrostatic charging shall be avoided.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter shall be mounted in a metal enclosure form B according to DIN43729 that is providing a degree of protection of at least IP6X according to EN60529, that is suitable for the application and correctly installed.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The surface temperature of the enclosure is equal to the ambient temperature plus 20 K, for a dust layer with a thickness up to 5 mm.

Revision date: Version Revision Page: 2013-08-07 V2R0 2/2



WWW.PRELECTRONICS.COM

## **IECEx Installation drawing**



For safe installation of 5343A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 13.0036X

Marking Ex nA [ic] IIC T6..T4 Gc

Ex nA [IC] IIC 16..14 GC T4:  $-40 \le Ta \le 85^{\circ}$ C Ex ic IIC Dc T6:  $-40 \le Ta \le 60^{\circ}$ C

Standards IEC 60079-0 : 2011, IEC 60079-11 : 2011, IEC 60079-15 : 2010

Terminal	Ex nA [ic]	Ex ic
1, 2	Umax = 35 V	Ui : 35 V, Ii:110 mA, Ii:10 μH, Ci:1,0 nF
3, 4, 6	Uo: 5 V, Io: 4 mA, Po: 20 mW, Lo: 900 mH, Co: 1000 μF	

#### Installation note:

For installation in a potentialy explosive gas atmosphere, the following instructions apply:

For nA installation the transmitter must be installed in an metal enclosure e.g. a form B enclosure, providing a degree of protection of at least IP54 according to IEC60529 that is suitable for the application and correctly installed or in an enclosure with type of protection Export Expor

For intrinsically safe installation the transmitter must be installed in enclosure providing a degree of protection of at least IP20 according to IEC60529 and that is suitable for the application.

Cable entry devices and blanking elements shall fulfill the same requirements

For an ambient temperature  $\geq$  60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

For installation in a potentially explosive dust atmposphere, the following instructions apply: The surface temperature of the enclosure is equal to the ambient temperature plus 20 K, for a dust layer with a thickness up to 5 mm.

The transmitter must be mounted in a enclosure according to DIN 43729 that provides a degree of protection of at least IP6X according to IEC60529, and that is suitable for the application. Cable entry devices and blanking elements shall fulfill the same requirements.

Revision date: Version Revision Page: 2013-06-03 V1R0 1/1



WWW.PRELECTRONICS.COM

## IECEx Installation drawing



For safe installation of 5343B the following must be observed. The module shall only be Installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 13.0036X

Marking Ex ia IIC T4...T6 Ga

Ex ia IIIC Da Ex ia I Ma

Standards IEC 60079-0 : 2011, IEC 60079-11 : 2011, IEC 60079-26:2006

#### Hazardous area Zone 0, 1, 2, 20, 21, 22, M1 Non Hazardous Area T4: -40 ≤ Ta ≤ 85°C T5: -40 ≤ Ta ≤ 60°C T6: -40 ≤ Ta ≤ 45°C Terminal: 3,4,6 Uo: 30 VDC lo: 8 mA Po: 60 mW Lo: 35 mH 5343B Co: 66 nF Barrier Terminal: 1,2 Ui: 30 VDC

li: 120 mA Pi: 0.84 W Li: 10 μH Ci: 1.0 nF

Revision date: Version Revision 0Page: 2013-06-03 V1R0 1/2



#### WWW.PRELECTRONICS.COM

#### Installation notes.

In a potentially explosive gas atmosphere, the transmitter shall be mounted in a metal form B enclosure in order to provide a degree of protection of at least IP20 according to IEC60529. If however the environment requires a higher degree of protection, this shall be taken into account.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, Ma and Mb, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

For explosive dust atmospheres, the surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter shall be mounted in a metal enclosure form B according to DIN43729 that is providing a degree of protection of at least IP6X according to IEC60529, that is suitable for the application and correctly installed.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature  $\geq$  60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.


Revision date: Version Revision 0Page: 2013-06-03 V1R0 2/2




WWW.PRELECTRONICS.COM

### **FM Installation Drawing**

#### Model 5331D, 5332D, 5333D and 5343B

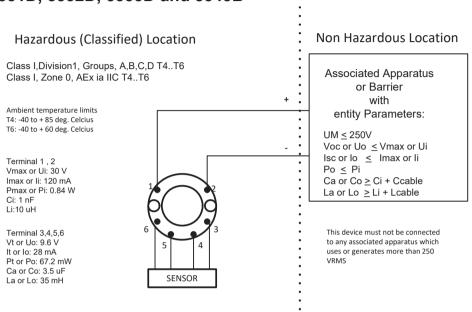

#### Model 5335D, 5337D

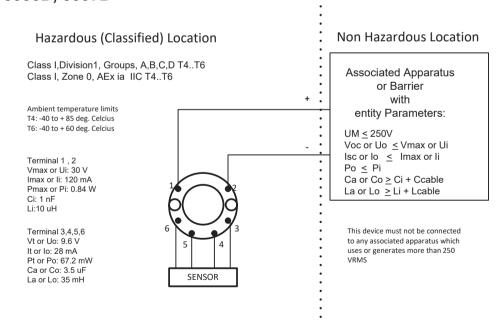

Revision date: Version Revision Page: 2018-08-27 V3R0 1/2



#### WWW.PRELECTRONICS.COM

#### The entity concept

The Transmitter must be installed according to National Electrical Code (ANSI-NFPA 70) and shall be installed with the enclosure, mounting, and spacing segregation requirement of the ultimate application.

Equipment that is FM-approved for intrinsic safety may be connected to barriers based on the ENTITY CONCEPT. This concept permits interconnection of approved transmitters, meters and other devices in combinations which have not been specifically examined by FM, provided that the agency's criteria are met. The combination is then intrinsically safe, if the entity concept is acceptable to the authority having jurisdiction over the installation.

The entity concept criteria are as follows:

The intrinsically safe devices, other than barriers, must not be a source of power.

The maximum voltage  $Ui(V_{MAX})$  and current  $Ii(I_{MAX})$ , and maximum power Pi(Pmax), which the device can receive and remain intrinsically safe, must be equal to or greater than the voltage (Uo or  $V_{OC}$  or  $V_t$ ) and current (Io or  $I_{SC}$  or  $I_t$ ) and the power Po which can be delivered by the barrier.


The sum of the maximum unprotected capacitance  $(C_i)$  for each intrinsically device and the interconnecting wiring must be less than the capacitance  $(C_a)$  which can be safely connected to the barrier.

The sum of the maximum unprotected inductance (L<sub>i</sub>) for each intrinsically device and the interconnecting wiring must be less than the inductance (L<sub>a</sub>) which can be safely connected to the barrier.

The entity parameters Uo, Voc or Vt and Io, Isc or It, and Ca and La for barriers are provided by the barrier manufacturer.

#### **NI Field Circuit Parameters**

#### Model 5331D, 5332D, 5333D, 5335D, 5337D and 5343B

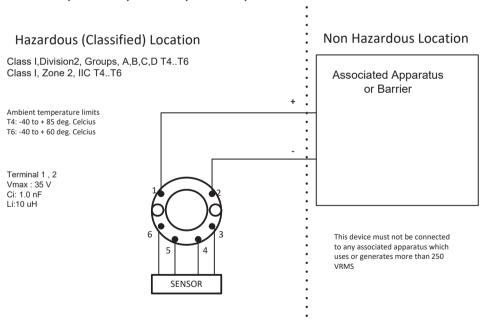

Revision date: Version Revision Page: 2018-08-27 V3R0 2/2



WWW.PRELECTRONICS.COM

## Desenho de Instalação INMETRO



Para instalação segura do 5333A ou 5343A o seguinte deve ser observado. O modo deve apenas ser instalado por pessoas qualificadas que são familiarizadas com as leis nacionais e internacionais, diretrizes e padrões que se aplicam a esta área.

Ano de fabricação pode ser pego dos dois primeiros dígitos do número de série.

Certificado DEKRA 16.0014 X

Marcas Ex nA [ic] IIC T6..T4 Gc

EX NA [IC] 11C 16..14 GC

Ex ic IIC T6..14 GC

T4: -40 ≤ Ta ≤ 85°C

T6: -40 ≤ Ta ≤ 60°C

Normas ABNT NBR IEC 60079-0: 2013; ABNT NBR IEC 60079-11: 2013

ABNT NBR IEC60079-15: 2012

Terminais	Ex nA [ic]	Ex ic
1,2	U ≤ = 35V	Ui : 35V, Ii:110mA, Ii:10µH, Ci:1,0nF
3,4,6	Uo: 5V, Io: 4mA, F	o: 20mW, Lo: 900mH, Co: 1000µF

#### Notas para instalação

Para a instalação em uma atmosfera de gás potencialmente explosivo, se aplicam as instruções a seguir:

Para a instalação nA o transmissor deve ser instalado em um invólucro de metal, por exemplo, gabinete em forma B que forneça um grau de proteção de pelo menos IP54 de acordo com IEC60529 ou em um invólucro com tipo de proteção Ex n ou Ex e.

Para a instalação Ex ic o transmissor deve ser instalado em um invólucro proporcionando um grau de proteção de IP20, pelo menos, de acordo com a norma ABNT NBR IEC 60529. E o invólucro deve ser adequado para a aplicação e corretamente instalado.

Dispositivos de entrada de cabos e elementos de supressão devem cumprir os mesmos requisitos. Para temperatura ambiente >= 60°C, fios de resistência ao calor devem ser usados com uma faixa de pelo menos 20K acima da temperatura ambiente.

Para a instalação em uma atmosfera de poeira potencialmente explosiva , se aplicam as instruções a seguir:

O transmissor deve ser montado em invólucro de metal forma B de acordo com DIN43729 que está fornecendo um grau de proteção de pelo menos IP6X de acordo com ABNT NBR IEC60529.

O invólucro deve ser adequado para aplicação e instalado corretamente.

As entradas dos cabos e os elementos de obturação que podem ser utilizados são adequados para a aplicação e corretamente instalados.

A temperatura da superfície do invólucro é igual à temperatura ambiente mais 20 K, para uma camada de pó , com uma espessura até 5 mm.

Revision date: Version Revision Page: 2016-10-28 V2R0 1/1



WWW.PRELECTRONICS.COM

## Desenho de Instalação InNMETRO



Para instalação segura do 5333D ou 5343B o seguinte deve ser observado. O modo deve apenas ser instalado por pessoas qualificadas que são familiarizadas com as leis nacionais e internacionais, diretrizes e padrões que se aplicam a esta área.


Ano de fabricação pode ser pego dos dois primeiros dígitos do número de série.

Certificado DEKRA 16.0014 X

Marcas Ex ia IIC T6...T4 Ga

Ex ia IIIC Da

Normas ABNT NBR IEC 60079-0 : 2013; ABNT NBR IEC 60079-11 : 2013

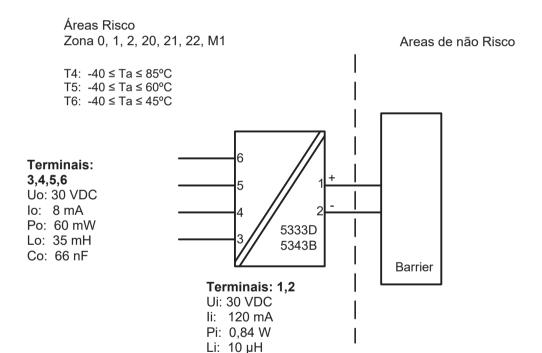

Ci: 1,0 nF

Revision date: Version Revision Page: 2016-10-28 V2R0 1/2



#### WWW.PRELECTRONICS.COM

#### Notas de Instalação.

Em uma atmosfera de gás potencialmente explosiva, o transmissor deve ser montado em um enclousure a fim de garantir um grau de proteção de no mínimo IP20 de acordo com ABNT NBR IEC60529. Se contudo o ambiente requer um nível de proteção maior, isso deve ser levado em conta

Se o transmissor é instalado em uma atmosfera explosiva exigindo o uso de equipamento de proteção de nível Ga e se o invólucro é feito de alumínio, ele deve ser instalado de modo que, mesmo em caso de avaria rara, fontes de ignição devido a impacto e fricção, faíscas são eliminadas; Se o enclosure é feito de materiais não metálicos, cargas eletroestáticas devem ser evitadas.

Se o enclosure é feito de materiais não metálicos, cargas eletroestáticas devem ser evitadas.

Para instalação em atmosfera de poeira potencialmente explosiva, as instruções a seguir:

O transmissor deve ser montado em invólucro de metal forma B de acordo com DIN43729 que está fornecendo um grau de proteção de pelo menos IP6X de acordo com ABNT NBR IEC60529. O invólucro deve ser adequado para aplicação e instalado corretamente.

As entradas dos cabos e os elementos de obturação que podem ser utilizados são adequados para a aplicação e corretamente instalados.

Para temperatura ambiente >= 60°C, fios de resistência ao calor devem ser usados com uma faixa de pelo menos 20K acima da temperatura ambiente.

A temperatura da superfície do invólucro é igual à temperatura ambiente mais de 20 K, por uma camada de pó, com uma espessura até 5 mm.

Revision date: Version Revision Page: 2016-10-28 V2R0 2/2

## **Document history**

The following list provides notes concerning revisions of this document.

Rev. ID	Date	Notes
104	14/14	IECEx, FM and INMETRO approvals added
105	15/03	GL marine approval added
106	17/07	IECEx, FM and INMETRO installation drawings
		updated
107	18/48	FM installation drawing updated

# We are near you, all over the world

Our trusted red boxes are supported wherever you are

All our devices are backed by expert service and a 5-year warranty. With each product you purchase, you receive personal technical support and guidance, day-to-day delivery, repair without charge within the warranty period and easily accessible documentation.

We are headquartered in Denmark, and have offices and authorized partners the world over. We are a local

business with a global reach. This means that we are always nearby and know your local markets well. We are committed to your satisfaction and provide PERFORMANCE MADE SMARTER all around the world.

For more information on our warranty program, or to meet with a sales representative in your region, visit prelectronics.com.

## Benefit today from PERFORMANCE MADE SMARTER

PR electronics is the leading technology company specialized in making industrial process control safer, more reliable and more efficient. Since 1974, we have been dedicated to perfecting our core competence of innovating high precision technology with low power consumption. This dedication continues to set new standards for products communicating, monitoring and connecting our customers' process measurement points to their process control systems.

Our innovative, patented technologies are derived from our extensive R&D facilities and from having a great understanding of our customers' needs and processes. We are guided by principles of simplicity, focus, courage and excellence, enabling some of the world's greatest companies to achieve PERFORMANCE MADE SMARTER.