



# 4511 MODBUS RTU Configuration Manual

**Solenoid / alarm driver**

No. 9203MCM100(1328)



**9 2 0 3**

# CONTENTS

Introduction .....	3
Modbus basics .....	3
Modbus RTU .....	3
Supported Function Codes .....	3
Modbus Parameters and factory default settings .....	3
Modbus RTU segment line termination .....	3
9203 Modbus Configuration Parameter List .....	4
General .....	4
Input .....	4
Display .....	4
Output .....	4
9203 Modbus Process Parameter List .....	5
4511 Modbus Configuration Parameter List .....	6
4511 Modbus Status Parameter List .....	6
4511 Modbus Front Programming Parameter Menu .....	6

# INTRODUCTION

## This configuration manual

contains the necessary information for configuring a PR 9203 device which is connected to a PR 4511 Modbus RTU enabler.

## Modbus is a “master-slave” system,

where the “master” communicates with one or multiple “slaves”.

The master typically is a PLC (Programmable Logic Controller), DCS (Distributed Control System), HMI (Human Machine Interface), RTU (Remote Terminal Unit) or PC.

The three most common Modbus versions used are: MODBUS ASCII, MODBUS RTU and MODBUS/TCP.

In Modbus RTU, data is coded in binary, and requires only one communication byte per data byte. This is ideal for use over multi-drop RS485 networks, at speeds up to 115,200 bps.

The most common speeds are 9,600 bps and 19,200 bps.

Modbus RTU is the most widely used industrial protocol and is supported by the 4511.

## Modbus RTU:

To communicate with a slave device, the master sends a message containing:

**Device Address - Function Code - Data - Error Check**

## The Device Address is a number from 0 to 247.

Messages sent to address 0 (broadcast messages) will be accepted by all slaves, but numbers 1-247 are addresses of specific devices. With the exception of broadcast messages, a slave device always responds to a Modbus message so the master knows the message was received.

## 4511 Supported Modbus Function Codes:

Command	Function code
Read Holding Registers	03
Read Input Registers	04
Write Single Register	06
Diagnostics	08
Write Multiple Registers	16

**The Function Code** defines the command that the slave device is to execute, such as read data, accept data, report status. Some function codes have sub-function codes.

**The Data** defines addresses in the device’s memory map for read functions, contains data values to be written into the device’s memory, or contains other information needed to carry out the function requested.

**The Error Check** is a 16-bit numeric value representing the Cyclic Redundancy Check (CRC).

## Maximum number of registers which can be read or written at once:

For a read command, the limit is 8 registers at a baud rate up to 38,400 bps, 16 registers @ 57,800 bps and 32 registers @ 115,200 bps.

For a write command, the limit is 123 registers at baud rates up to 115,200 bps.

## 4511 Modbus parameter settings:

Automatic Baudrate Detection: Can be configured YES or **NO**  
Supported Baudrates: 2400, 4800, 9600, **19.2k**, 38.4k, 57.6k, 115.2k bps  
Parity Mode: **Even**, Odd or None parity  
Stop Bits: **1** or 2 stop bits  
Response delay: 0...1000 ms (**0 ms = default**)  
Modbus slave addressing range: 1 - 247 (**247 = default address**)  
Modbus Parameter Storage: Saved in non-volatile memory in the 4511 device  
(Factory Default Values are marked in **bold**)

## Modbus RTU segment line termination:

A 120 Ohm resistor should be installed on both ends of a RS485 Modbus RTU segment loop to prevent signal echoes from corrupting data on the line.

## 9203 Modbus Configuration Parameter List

Category	Parameter Name	No.	Register Address	Register Size	Read/Write	Type	Description	Values
GENERAL	DEVICE NUMBER	0	0	1	RO	UNSIGNED INTEGER	Defines the actual device number	9203 = 37379 (0x9203))
GENERAL	DEVICE VERSION	1	1	1	RO	UNSIGNED INTEGER	Product version	0
GENERAL	PASSWORD	3	3	1	R/W	UNSIGNED INTEGER	Password for entering configuration menu	Range: 0...9999
GENERAL	PASSWORD TRY	4	4	1	R/W	UNSIGNED INTEGER	Password attempted for entering configuration menu	Range: 0...9999
DISPLAY	DISPLAY CONTRAST	8	8	1	R/W	UNSIGNED INTEGER	Contrast in the LCD display	Range: 0...9
DISPLAY	DISPLAY BACKLIGHT	9	9	1	R/W	UNSIGNED INTEGER	Backlight intensity in LCD	Range: 0...9
DISPLAY	LINE FUNCTION	10	10	1	R/W	INTEGER	Information shown in input line of display in monitor mode (normal mode).	LOAD = 0 TAG = 1 D.OUT = 2 ALTERNATING = 3
GENERAL	ENABLE PASSWORD	11	11	1	R/W	INTEGER	Password protect entry to configuration menu)	NO = 0 YES = 1
GENERAL	HELP TEXT LANGUAGE	12	12	1	R/W	INTEGER	Language for the help texts shown on display	UK = 0 DK = 1 DE = 2 FR = 3 SE = 4 IT = 5 ES = 6
GENERAL	SIL ENABLE *1)	13	13	1	RO	INTEGER	Read SIL mode	NO = 0 YES = 1
GENERAL	DEVICE TYPE	14	17	1	RO	INTEGER	Defines the actual device type together with the device No (e.g. 9203B1A = 0x0B1A)	B1A= 2842 (0x0B1A) B1B= 2843 (0x0B1B) B2A= 2858 (0x0B2A)
INPUT	CHANNEL 1 FUNCTION	15	18	1	R/W	UNSIGNED INTEGER	Select function type for channel 1	INVERT = 0 DIRECT = 1
DISPLAY	CHANNEL 1 TAG TEXT	16	20	3	R/W	ASCII CHAR	Tag of the device channel 1 (5 characters)	Range: ASCII values from 32 to 90 (' ' to 'Z')
INPUT	CHANNEL 2 FUNCTION	17	23	1	R/W	UNSIGNED INTEGER	Select function type for channel 2	INVERT = 0 DIRECT = 1
DISPLAY	CHANNEL 2 TAG TEXT	18	25	3	R/W	ASCII CHAR	Tag of the device channel 2 (5 characters)	Range: ASCII values from 32 to 90 (' ' to 'Z')
GENERAL	CHECKSUM	100	100	1	RO	UNSIGNED INTEGER	CRC16 checksum of the configuration	Range 0...65536
GENERAL	Configuration counter	101	101	1	RO	UNSIGNED INTEGER	This counter will count the number of times the configuration has been changed. The counter is reset on power-up	Range 0...65536

\*1) If SIL mode is set by an authorized SIL user (SIL ENABLE = YES), **all** parameters become READ ONLY

## 9203 Modbus Process Parameter List

Parameter Name	No.	Register Address	Register Size	Read/Write	Type	Description:	Values
CONFIGURATION STATUS	1000	1000	1	RO	INTEGER	Shows the device configuration according to the SIL setting.	<b>"FAIL"</b> No valid configuration has been received <b>"OPEN"</b> Actual configuration is NOT locked (non-SIL) <b>"LOCK"</b> Actual configuration is locked (SIL) <b>"INIT"</b> Initial status after a powerup/reset until a configuration has been received
ERROR STATUS	1001	1002	1	RO	INTEGER	Status of common errors for the device.	CRC ERROR: bit 0 = 1 CALIBRATION ERROR: bit 1 = 1 CONFIGURATION ERROR: bit 2 = 1 READ ERROR: bit 3 = 1 WRITE ERROR: bit 4 = 1 SUPPLY ERROR: bit 5 = 1 CPU ERROR: bit 6 = 1 FLASH/RAM/CRC ERROR: bit 7 = 1
MEASURE STATUS	1002	1003	1	RO	UNSIGNED INTEGER	Shows the device measurement status.	CH1 ENERGIZED: bit 0 = 1 CH1 BREAK DETECT: bit 1 = 1 CH1 SHORT DETECT: bit 2 = 1 CH1 DIRECTION: bit 3 = 1 CH2 ENERGIZED: bit 4 = 1 CH2 BREAK DETECT: bit 5 = 1 CH2 SHORT DETECT: bit 6 = 1 CH2 DIRECTION: bit 7 = 1
CHANNEL 1 CURRENT	1003	1004	1	RO	UNSIGNED INTEGER	Shows the measurement of channel 1 in mA.	Range: 0...255
CHANNEL 1 STATUS	1004	1005	1	RO	UNSIGNED INTEGER	Shows the status of channel 1.	FREQ. ABOVE 1Hz: bit 0 = 1 FREQ. ABOVE 5Hz: bit 1 = 1
CHANNEL 2 CURRENT	1005	1006	1	RO	UNSIGNED INTEGER	Shows the measurement of channel 2 in mA.	Range: 0...255
CHANNEL 2 STATUS	1006	1007	1	RO	UNSIGNED INTEGER	Shows the status of channel 2.	FREQ. ABOVE 1Hz: bit 0 = 1 FREQ. ABOVE 5Hz: bit 1 = 1
MEASURE CONTROL	1007	1008	1	R/W	UNSIGNED INTEGER	Enables simulation of Error and Rail signals. Actual setting of the signals is controlled by OUTPUT STATE.	RESERVED Must be set to 0 bit 0 RESERVED Must be set to 0 bit 1 Error out simulation, set by OUTPUT STATE bit 2 = 1 Rail signal simulation, set by OUTPUT STATE bit 3 = 1 RESERVED Must be set to 0 bit 4...7
OUTPUT STATE	1008	1009	1	R/W	UNSIGNED INTEGER	Shows status of Used to set value of the simulated process.	RESERVED Must be set to 0 bit 0...3 Error out simulation value (1=OFF, 2=ON) bit 4 Rail signal simulation value (1=OFF, 2=ON) bit 5 RESERVED Must be set to 0 bit 6...7
TIMEOUT COUNTER	1009	1010	1	R/W	UNSIGNED INTEGER	Time-out counter which resets various bits in MEASURE CONTROL upon overflow and is automatically set to 133. Decrements once every 0.075 s.	Range: 0...255

## 4511 Modbus Configuration Parameter List

Parameter Name	No.	Register Address	Register Size	Read/Write	Type	Description	Values
ENABLE MODBUS	1	3000	1	R/W	INTEGER	Enable Modbus communication. If disabled, 4511 ignores all frames sent from the Modbus master and the only way to re-enable Modbus communication is by using the 4511 menu.	NO = 0 YES = 1
BAUDRATE	2	3001	1	R/W	INTEGER	The baud value used for Modbus communication	2400 BAUD = 0 4800 BAUD = 1 9600 BAUD = 2 19200 BAUD = 3 38400 BAUD = 4 57600 BAUD = 5 115200 BAUD = 6
ENABLE AUTOBAUD	3	3002	1	R/W	INTEGER	Enable automatic baudrate detection. If enabled, 4511 determines the baud automatically by listening to frames sent on the Modbus line.	NO = 0 YES = 1
PARITY	4	3003	1	R/W	INTEGER	Configures parity check on Modbus frames	NONE = 0 EVEN PARITY = 1 ODD PARITY = 2
STOPBITS	5	3004	1	R/W	INTEGER	Configures the number of stopbits in Modbus frames	ONE STOPBIT = 1 TWO STOPBITS = 2
ADDRESS	6	3005	1	R/W	INTEGER	Configures the Modbus address of the 4511 (Address 0 is broadcast address)	Range: 1...247
RESPONSE DELAY	7	3006	1	R/W	INTEGER	Configures minimum delay for Modbus response in ms	Range: 0...1000

## 4511 Modbus Status Parameter List

Parameter Name	No.	Register Address	Register Size	Read/Write	Type	Description	Values
AUTOBAUD STATUS	1	4000	1	RO	INTEGER	Actual state of automatic baudrate detection	2400 BAUD = 0 4800 BAUD = 1 9600 BAUD = 2 19200 BAUD = 3 38400 BAUD = 4 57600 BAUD = 5 115200 BAUD = 6 SEARCHING = 7 ERROR = 8
IDENTIFY DEVICE	2	4001	1	R/W	INTEGER	Enables the device to flash the LCD background with appr. 4 Hz. <b>Value will automatically return to NO if not written within 10 seconds!</b>	NO = 0 YES = 1
MAXIMUM READ REGISTERS	3	4002	1	RO	INTEGER	Maximum allowed number of registers that can be read in one command, with the given/detected baudrate	Range: 8...32

## 4511 Modbus Front Programming Parameter Menu

