



3000系列
隔離器
佩勒電子(上海)有限公司
云嶺東路 651 号 305 室
普陀區，上海 200062 中國

**DK****ADVARSEL**

For at undgå fare for elektriske stød og brand skal sikkerhedsreglerne overholdes, og vejledningerne skal følges. Specifikationerne må ikke overskrides, og modulet må kun benyttes som beskrevet i det følgende. Installationsevjejledningen skal studeres omhyggeligt, før modulet tages i brug. Kun kvalificeret personale (teknikere) må installere dette modul. Hvis modulet ikke benyttes som beskrevet i denne installationsvejledning, så forringes modulets beskyttelsesforanstaltninger. Der må ikke tilsluttes farlig spænding til modulet, for dette er fastmonteret.

For at undgå eksplosion og alvorlig tilskadekomst: Moduler med mekaniske fejl skal returneres til PR electronics til reparation eller udskiftning. Reparation af modulet må kun foretages af PR electronics A/S.

I applikationer hvor farlig spænding er tilsluttet modulets ind-/udgang skal det sikrøs, der er tilstrækkelig afstand eller isolasjon mellem ledninger, klemmer og hus til omgivelserne (inkl. nabomoduler) til at opretholde beskyttelsen mod farlig spænding.

Risiko for elektrostatiske laddinger. For at forhindre risikoen for eksplosion pga. elektrostatiske oppladning af kabinelet med modulene, kan hændernes, når området er sikret, eller når der er taget passende forholdsregler mod elektrostatiske udladninger.

SIKKERHEDSREGLER

Modtagelse og udpakning
Udpak modulet uden at beskadige det. Kontroller ved modtagelsen, at modultypen svarer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på blivende plads.

Miljøforhold
Undgå direkte sollys, kraftigt støv eller varme, mekaniske rystelser og stød, og udset ikke modulet for regn eller kraftig fugt. Om nødvendigt skal opvarmning, ud over de opgivne grænser for omgiveleste temperatur, forhindres ved hjælp af ventilation. Alle moduler kan anvendes i Overspændingskategori II og Forureningsgrad 2 som defineret i EN/IEC 60664-1. Modulene er designet til at være sikret mindst op til en højde af 2000 m. Enheden er konstrueret til indendørs bruk.

Installation
Installation og tilslutning af modulet skal følge landets gældende regler for installation af elektrisk materiel bl.a. med hensyn til ledningstværsnit, for-sikring og placering.

Beskrivelse af indgang / udgang og forsrynsningsforbindelser findes i installationsvejledningen og på sidesidet.

Modulet er forsynet med skrueterminaler og skal forsynes fra en dobbeltisolert / forstærket isoleret spændingsforsyning. En afbryder placeres let tilgængeligt og tæt ved modulet. Afbryderen skal mærkes sædet, at der ikke er tvivl om, at den afbryder spændingen til modulet.

System 3000 skal installeres på DIN-skinner iht. EN 60715.

UL-installation
Brug kun 60/75°C kobberledninger.

Ledningskvadrat AWG 26-12

UL fil-nummer E314307

Modulene er af typen Open Type Listed Process Control Equipment.

For at undgå at personer kommer til skade ved berringning af strømførende dele, skal modulene monteres i et kabinet.

Spændingsforsyningen skal være i overensstemmelse med NEC Class 2, som beskrevet i "National Electrical Code® (ANSI / NFPA 70).

cFMus installation i Division 2 eller Zone 2

FM17CA0003X Cl. I, Div. 2, Gr. A-D T4 el.
Cl. I, Zone 2, Ex nA IIC T4

FM17US0004X Cl. I, Div. 2, Gr. A-D T4 el.
Cl. I, Zone 2, AEx nA IIC T4

I class I, Division 2 eller Zone 2 installatoren skal monteres i et kabinet, der kan åbnes ved brug af værkøj, og som passer til en eller flere af de trædramningsmodeller for Class I, Division 2, der er specifiseret i National Electrical Code (ANSI / NFPA 70) eller i Canada i Canadian Electrical Code (C22.1).

System 3000 moduler må kun tilsluttes til kredsløb, med begrænset udgangsgefekt iht. NEC Class 2, som beskrevet i "National Electrical Code® (ANSI / NFPA 70)". Hvis modulene tilkobles redundant forsyningsspænding (til separate spændingsforsyninger), skal begge forsyninger opfynde dette krav. Når modulene installeres udendørs eller i områder med vand eller fugt, skal kabinetten som minimum overholde kravene for IP54.

Advarsel: Udskifting af komponenter kan forringe modulets egnethed til installation i zone 2 / division 2.

Advarsel: For at forhindre antændelse af eksplosive atmosfærer skal forsyningerne afbrydes, før vedligeholdelse/reparation påbegyndes. Monter/demonter ikke stik, når forsyning er tilsluttet, og der forefindes en eksplosionsfarlig gasblanding.

Advarsel: Monter/demonter ikke modulet på power rail, når der forefindes en eksplosionsfarlig gasblanding.

IECEx, ATEX og UKCA installation i Zone 2

IECEx KEM 10.0068 X Ex ec IIC T4 Gc
KEMA 10ATEX0147 X /

DEKRA 21UKEX0055X II 3 G Ex ec IIC T4 Gc

Før sikker installation skal følgende overholdes: Modulene må kun installeres af kvalificerede personer, som er bekendt med nationalt og internationalt lovgivning, direktiver og standarder i det land, hvor modulene skal installeres.

Produktionsråforskning af de farlige cifer i serienummeret.

Modulene skal installeres i et der vil egnet kabinet, som yder en IP-beskyttelse på mindst IP54 iht. EN/IEC 60079-0, og som tager hensyn til de omgivelserne/borhold, hvoriunder modulene anvendes.

Hvis temperaturer under nominelle forhold overstiger 70°C ved kablers eller nærføringens indgang, eller 80°C ved ledningernes forgrænsningpunkt, skal temperaturspecifikationerne for det valgte kabel overholde den faktisk målte temperatur.

For at forhindre antændelse af eksplosive atmosfærer skal forsyningerne afbrydes, før vedligeholdelse/reparation påbegyndes. Monter/demonter ikke stik, når forsyning er tilsluttet, og der forefindes en eksplosionsfarlig gasblanding.

Monter/demonter ikke modulene på power rail, når der forefindes en eksplosionsfarlig gasblanding.

Rengøring

Modulene må, i spændingsløs tilstand, rengøres med en klud let fugtet med destilleret vand.

Elektriske specifikationer

Driftstemperatur -25°C til +70°C

Lagringstemperatur -40°C til +85°C

Forsyningsspænding, DC 16.8...31.2 VDC

Forsyningsspænding, 3333 2-trådsforsyning / 3.3...35 VDC

Forsyningsspænding, 3331 2-trådsforsyning / 5.5...35 VDC

Forsyningsspænding, 3337 2-trådsforsyning / 6.2...35 VDC

Max. forbrug:

3101, 3102 0.52 W

3111, 3112, 3113 0.7 W

3331, 3333, 3337 0.8 W

1-isolationsspænding, test 2.5 kVAC

1-isolationsspænding, arbejdsj. 300 VAC (forstørket) / 250 VAC (Zone 2, Div. 2)

Dobbelt isolation Indg. / udg. 1 / udg. 2 / forsyning

Relativ luftfugtighed < 95% RH (ikke kond.)

Mål (HxBxD) 11.3 x 6.1 x 115 mm

Kapslingsklasse IP20

Vægt 70 g

Overholde myndighedskrav

EMC 2014/30/EU & UK SI 2016/1091

LVD 2014/35/EU & UK SI 2016/1101

ATEX 2014/34/EU & UK SI 2016/1107

RoHS 2011/65/EU & UK SI 2012/3032

EAC TR-CU 020/2011

EAC Ex TR-CU 012/2011

Godkendelser

ATEX KEMA 10ATEX0147 X

IECEx KEM 10.0068 X

UKCA DEK21UKEX0055X

c FM us FM17CA0003X / FM17US0004X

c UL us, UL 61010-1 E314307

DNV-GL, Ships & Offshore TAA00001RW

EAC Ex RU C-DK.HA65.B.00355/19

¹ Gælder ikke 3101, 3102 og 3333.

¹ Does not apply to 3101, 3102 and 3333.

UK**WARNING**

To avoid the risk of electric shock and fire, the safety instructions of this guide must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following. Prior to the commissioning of the device, this installation guide must be examined carefully. Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Until the device is fixed, do not connect hazardous voltages to the device.

To avoid explosion and serious injury: Modules having mechanical failures must be returned to PR electronics for repair or replacement. Repair of the device must be done by PR electronics A/S only.

In applications where hazardous voltage is connected to in-/outputs of the device, sufficient spacing or isolation from wires, terminals and enclosure - to surroundings (incl. neighbouring devices), must be ensured to maintain protection against electric shock.

Potential electrostatic charging hazard. To avoid the risk of explosion due to electrostatic charging of the enclosure, do not handle the units unless the area is known to be safe, or appropriate safety measures are taken to avoid electrostatic discharge.

Safety Instructions**Receipt and unpacking**

Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation. All devices can be used for Measurement / Overvoltage Category II and Pollution Degree 2 as defined in EN/IEC 60664-1. The module is designed to be safe at least under an altitude up to 2 000 m. The device is designed for indoor use.

Mounting

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse and location. Descriptions of input/output and supply connections are shown in this installation guide and on the side label.

The device is provided with field wiring terminals and shall be supplied from a Power Supply having double/reinforced insulation. A power switch should be easily accessible and close to the device. The power switch shall be marked as the disconnecting unit for the device.

SAFETY INSTRUCTIONS

Receipt and unpacking

Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation. All devices can be used for Measurement / Overvoltage Category II and Pollution Degree 2 as defined in EN/IEC 60664-1. The module is designed to be safe at least under an altitude up to 2 000 m. The device is designed for indoor use.

Mounting

Mounting and connection of the module must be conform to the legislation national in vigueur pour le montage de matériau électrique, par exemple, diamètres des fils, fusibles de protection et implantation des modules. Les connexions des alimentations et des entrées / sorties sont décrites dans ce guide et sur l'étiquette de la face latérale du module. Les appareils sont équipés de borniers à vis et doivent être raccordés à une alimentation qui a une double isolation renforcée. L'interrupteur doit être à proximité du module et facile d'accès. Ce bouton doit être étiqueté avec la mention: peut couper la tension du module. Il convient de monter l'appareil SYSTEM 3000 sur un rail DIN en se conformant à la norme EN 60715.

Installation UL

Use 60/75°C copper conductors only.
Wire size AWG 26-12
UL file number E314307

Modulene er af typen Open Type Listed Process Control Equipment. To prevent injury resulting from accessibility to live parts the equipment must be installed in an enclosure.

The power supply unit must comply with NEC Class 2, as described by the National Electrical Code® (ANSI / NFPA 70).

cFMus installation in Division 2 or Zone 2

FM17CA0003X Cl. I, Div. 2, Gr. A-D T4 or
Cl. I, Zone 2, Ex nA IIC T4

FM17US0004X Cl. I, Div. 2, Gr. A-D T4 or
Cl. I, Zone 2, AEx nA IIC T4

In class I, Division 2 or Zone 2 installations, the subject equipment shall be mounted within a tool-secured enclosure which is capable of accepting one or more of Class I, Division 2 wiring methods specified in the National Electrical Code (ANSI / NFPA 70) or in Canada in the Canadian Electrical Code (C22.1). The System 3000 System Isolators and Converters must be connected to limited output NEC Class 2 circuits, as outlined in the National Electrical Code (ANSI / NFPA 70). If the devices are connected to a redundant power supply (two separate power supplies), both must meet this requirement.

Where installed in outdoor or potentially wet locations the enclosure shall at a minimum meet the requirements of IP54.

Warning: Substitution of components may impair suitability for zone 2 / division 2.

Warning: To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energised and an explosive gas mixture is present.

Warning: Do not mount or remove devices from the power rail when an explosive gas mixture is present.

Installation IECEx, ATEX and UKCA in Zone 2

FM17CA0003X Cl. I, Div. 2, Gr. A-D T4 or
Cl. I, Zone 2, Ex nA IIC T4

DK Indgangssignaler

UK Input signals

FR Signaux d'entrée

DE Eingangssignale


DK Udgangssignaler

UK Output signals

FR Signaux de sortie

DE Ausgangssignale


RTD	TC J & K
RTD	TC J & K
RTD	TC J & K
WTH	TE J & K

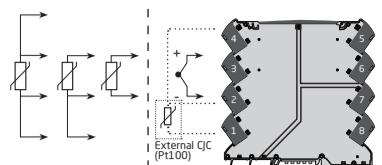

+ - CJC		Type
-	-	3 2 V*
1,2 & 3,4 1,2 & 3	2 & 3	3101
-	-	3 2 N
1,2 & 3,4 1,2 & 3	2 & 3	3102
-	-	3 2 Y
1,2 & 3,4 1,2 & 3	2 & 3	3111
1,2 & 3,4 1,2 & 3	2 & 3	3112
1,2 & 3,4 1,2 & 3	2 & 3	3113
1,2 & 3,4 1,2 & 3	2 & 3	3331
1,2 & 3,4 1,2 & 3	2 & 3	3333
1,2 & 3,4 1,2 & 3	2 & 3	3337

*3101 only internal CJC

DK Forsyning UK Supply FR Alimentation DE Versorgung

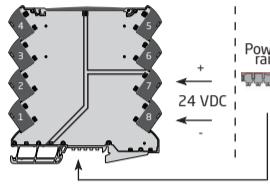

	Terminal	+	-	Power rail
3101	7	8	+	
3102	7	8	+	
3111	7	8	✓	
3111-N	7	8	+	
3112	7	8	✓	
3112-N	7	8	+	
3113	7	8	✓	
3113-N	7	8	+	

DK Programmering

Forsyning til enheden skal afbrydes, før ændringer i DIP-switch-indstillingen træder i kraft.

FR Programmation

Il faut mettre l'appareil sous tension pour valider la position des commutateurs.

3101

Sensor S1123	Sensor Error Detection S17
TC J	None
TC K	Enable
Output S1456	Output Error Level S18
0...20 mA	Downscale
4...20 mA	Upscale
0...10 V	
2...10 V	
0...5 V	
0...1.5 V	

● = ON

3111

Sensor S1123	Sensor Error Detection S17
TC J (Int. CJC)	None
TC K (Int. CJC)	Enable
TC J (Ext. CJC)	● ●
TC K (Ext. CJC)	● ●
Output S1456	Output Error Level S18
0...20 mA	Downscale
4...20 mA	Upscale
0...10 V	
2...10 V	
0...5 V	
1...5 V	

● = ON

3337

Sensor S1123	Sensor Error Detection S17
Pt100, 2w	None
Pt100, 3w	Enable
Pt100, 4w	●
Output S1456	Output Error Level S18
0...20 mA	Downscale
4...20 mA	Upscale
0...10 V	
2...10 V	
0...5 V	
1...5 V	

● = ON

3112

Sensor S1123	Sensor Error Detection S17
Pt100, 2w	None
Pt100, 3w	Enable
Pt100, 4w	●
Output S1456	Output Error Level S18
0...20 mA	Downscale
4...20 mA	Upscale
0...10 V	
2...10 V	
0...5 V	
1...5 V	

● = ON

3331

Sensor S1123	Sensor Error Detection S17
Pt100, 2w	None
Pt100, 3w	Enable
Pt100, 4w	●
Output S1456	Output Error Level S18
0...20 mA	Downscale
4...20 mA	Upscale
0...10 V	
2...10 V	
0...5 V	
1...5 V	

● = ON

3113

Sensor S1123	Sensor Error Detection S17
Pt100, 2w	None
Pt100, 3w	Enable
Pt100, 4w	●
TC J (Int. CJC)	●
TC K (Int. CJC)	●
TC J (Ext. CJC)	●
TC K (Ext. CJC)	●
Output S1456	Output Error Level S18
4...20 mA	Downscale
4...20 mA	Upscale
50 Hz	DIP
60 Hz	HART

● = ON

3333

Sensor S1123	Sensor Error Detection S17
Pt100, 2w	None
Pt100, 3w	Enable
Pt100, 4w	●
Output S1456	Output Error Level S18
4...20 mA	Downscale
4...20 mA	Upscale
50 Hz	< 30 ms
60 Hz	300 ms

● = ON

FM Installation drawing 3000QF01-V1R0

FM Certificates

FM17CA0003X

FM17US0004X

See Certificate

Standards:



CL I, Div. 2, Gr. A-D T4

CL I, Zone 2 AEx/Ex nA IIC T4

Marking:

Operating temperature -25°C to +70°C
 Operating temperature, 3105 0 to +70°C
 Storage temperature -40°C to +85°C
 1Isolation voltage, test 2.5 KVAC
 1Isolation voltage, working 250 VAC (Zone 2, Div. 2)

1 Does not apply to 3101, 3102 and 3333.

cFMus Installation In Division 2 or Zone 2

FM17CA0003X..... CL I, Div. 2, Gr. A-D T4 or

CL I, Zone 2, Ex nA IIC T4

FM17US0004X..... CL I, Div. 2, Gr. A-D T4 or

CL I, Zone 2, AEx nA IIC T4

Specific Conditions of use


In class I, Division 2 or Zone 2 installations, the subject equipment shall be mounted within a tool-secured enclosure which is capable of accepting one or more of Class I, Division 2 wiring methods specified in the National Electrical Code (ANSI/NFPA 70) or in Canada in the Canadian Electrical Code (C22.1). The 3000 System Isolators and Converters must be connected to limited output NEC Class 2 circuits, as outlined in the National Electrical Code® (ANSI / NFPA 70), only. If the devices are connected to a redundant power supply (two separate power supplies), both must meet this requirement.

Where installed in outdoor or potentially wet locations the enclosure shall at a minimum meet the requirements of IP54.

Warning: Substitution of components may impair suitability for zone 2 / division 2.**Warning:** To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energized and an explosive gas mixture is present.**Warning:** Do not mount or remove devices from the power rail when an explosive gas mixture is present.

DK Sidekilt UK Side label FR Etiquette DE Typenschild

DK Klemmenummer UK Terminal numbers FR Numéros des borniers DE Klemmennummer

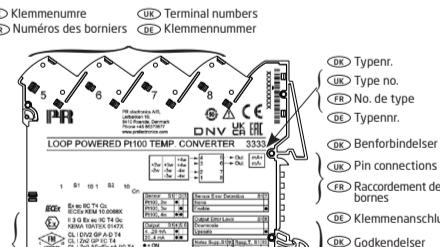

DK Kina RoHS UK China RoHS FR RoHS chinois DE China-RoHS

Part Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Printed circuit board	X	0	0	0	0	0

This table is prepared in accordance with the provisions of SJ/T 11364
 O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit