



## ConfigMate

### 4590

- Docking station for the PR 4501 Programming Display / 4511 Communication Enabler
- Handheld adaptor for programming the PR 3114 universal transmitter via 4501/4511
- Configuration upload and download tool on selected PR System 4000 and 9000 units
- Interfaces with the PR Preset software

#### Application


- The ConfigMate 4590 is used along with the detachable 4501 Programming Display or the 4511 Digital Communication Enabler.
- 4590 can operate as a docking station for the 4501 / 4511 - allowing the 4501 / 4511 to be connected to a PC and the PR Preset software.
- 4590 works standalone in adaptor mode for programming a PR 3114 unit.
- Upload and download function is for backup and restore purposes on selected PR 4000 and 9000 devices.
- The unit must be used together with PR Preset software to upload and download configuration parameters from a 4501 / 4511.

#### Technical characteristics


- In docking station mode the 4590 will be powered from the PC's USB power source.
- The included USB-B to a 2.5 mm jack cable must be used for connecting to a PR 3114.
- In docking mode the included USB-B to USB-A cable must be used for connecting to a PC.
- 3 x 1.5 V AAA batteries must be inserted for powering the 4590 in adaptor mode.
- Indication of battery level is displayed via the 3 green front LEDs.
- The 4590 will automatically detect if it is not in use, and will consequently shut itself down to conserve battery power.
- Battery life in adaptor mode is approximately 1 year of daily use, depending upon battery type.

#### Applications


Connection of 4590 to a PR 3114 device in adaptor mode:

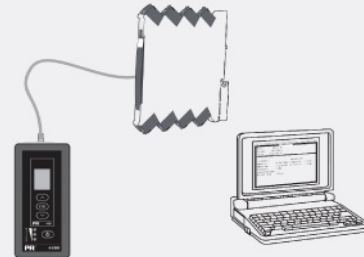

Connection of ConfigMate 4590 to a PR 4000/9000 device:

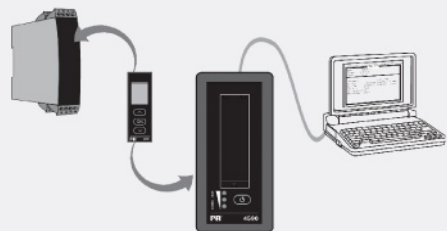

Connection of 4590 to a PC in docking mode:

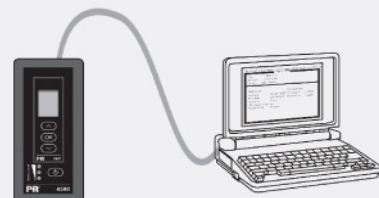

Order:

Type
4590