


PERFORMANCE
MADE
SMARTER

Product manual

5131

Programmable transmitter

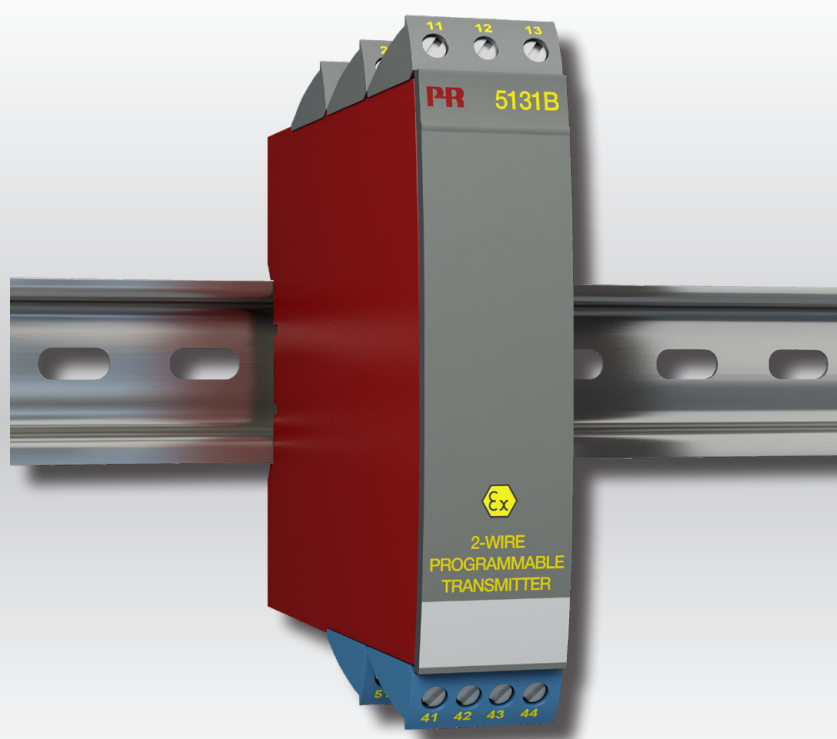

TEMPERATURE | I.S. INTERFACES | COMMUNICATION INTERFACES | MULTIFUNCTIONAL | ISOLATION | DISPLAY

No. 5131V107-UK

From serial no. 251685001-251688100
252183001

PR
electronics

6 Product Pillars

to meet your every need

Individually outstanding, unrivalled in combination

With our innovative, patented technologies, we make signal conditioning smarter and simpler. Our portfolio is composed of six product areas, where we offer a wide range of analog and digital devices covering over a thousand applications in industrial and factory automation. All our products comply with or surpass the highest industry standards, ensuring reliability in even the harshest of environments and have a 5-year warranty for greater peace of mind.



Temperature

Our range of temperature transmitters and sensors provides the highest level of signal integrity from the measurement point to your control system. You can convert industrial process temperature signals to analog, bus or digital communications using a highly reliable point-to-point solution with a fast response time, automatic self-calibration, sensor error detection, low drift, and top EMC performance in any environment.



I.S. Interface

We deliver the safest signals by validating our products against the toughest safety standards. Through our commitment to innovation, we have made pioneering achievements in developing I.S. interfaces with SIL 2 Full Assessment that are both efficient and cost-effective. Our comprehensive range of analog and digital intrinsically safe isolation barriers offers multifunctional inputs and outputs, making PR an easy-to-implement site standard. Our backplanes further simplify large installations and provide seamless integration to standard DCS systems.



Communication

We provide inexpensive, easy-to-use, future-ready communication interfaces that can access your PR installed base of products. All the interfaces are detachable, have a built-in display for readout of process values and diagnostics, and can be configured via push-buttons. Product specific functionality includes communication via Modbus and Bluetooth and remote access using our PR Process Supervisor (PPS) application, available for iOS and Android.



Multifunction

Our unique range of single devices covering multiple applications is easily deployable as your site standard. Having one variant that applies to a broad range of applications can reduce your installation time and training, and greatly simplify spare parts management at your facilities. Our devices are designed for long-term signal accuracy, low power consumption, immunity to electrical noise and simple programming.



Isolation

Our compact, fast, high-quality 6 mm isolators are based on microprocessor technology to provide exceptional performance and EMC-immunity for dedicated applications at a very low total cost of ownership. They can be stacked both vertically and horizontally with no air gap separation between units required.



Display

Our display range is characterized by its flexibility and stability. The devices meet nearly every demand for display readout of process signals and have universal input and power supply capabilities. They provide a real-time measurement of your process value no matter the industry and are engineered to provide a user-friendly and reliable relay of information, even in demanding environments.

Programmable transmitter

5131

Table of contents

Warning	4
Symbol identification	4
Safety instructions	5
How to demount system 5000	6
Application	7
Technical characteristics	7
Input types	7
Output	7
Sensor error detection	7
Configuration	8
Order	8
Electrical specifications	8
Selection of input type (5131A)	11
5131 connection to Loop Link	11
Block diagram	12
ATEX Installation Drawing	13
IECEX Installation Drawing	14
Document history	15

Warning



This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage. To avoid the risk of electric shock and fire, the safety instructions of this manual must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following. Prior to the commissioning of the device, this manual must be examined carefully. Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Warning



Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD-safe conditions:

- Dismantlement of the device for setting of DIP-switches and jumpers.
- General mounting, wire connection and disconnection.
- Troubleshooting the device.

Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.



Warning



SYSTEM 5000 must be mounted on a DIN rail according to DIN 60715. The communication connector of SYSTEM 5000 is connected to the input terminals on which dangerous voltages can occur, and it must only be connected to the programming unit Loop Link by way of the enclosed cable.

Symbol identification



Triangle with an exclamation mark: Warning / demand. Potentially lethal situations. Read the manual before installation and commissioning of the device in order to avoid incidents that could lead to personal injury or mechanical damage.



The CE mark proves the compliance of the device with the essential requirements of the directives.



The double insulation symbol shows that the device is protected by double or reinforced insulation.



Ex devices have been approved acc. to the ATEX directive for use in connection with installations in explosive areas.

Safety instructions

Definitions

Hazardous voltages have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

Technicians are qualified persons educated or trained to mount, operate, and also trouble-shoot technically correct and in accordance with safety regulations.

Operators, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

Receipt and unpacking

Unpack the device without damaging it and check whether the device type corresponds to the one ordered. The packing should always follow the device until this has been permanently mounted.

Environment

Avoid direct sun light, dust, high temperatures, mechanical vibrations and shock, and rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

The device must be installed in pollution degree 2 or better.

The device is designed to be safe at least under an altitude up to 2 000 m.

The device is designed for indoor use.

Mounting

Only technicians, who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these, should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively,

PR electronics A/S
www.prelectronics.com

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location.

Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.

Descriptions of input / output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label telling it will switch off the voltage to the device.

Year of manufacture can be taken from the first two digits in the serial number.

Calibration and adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

Normal operation

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

Cleaning


When disconnected, the device may be cleaned with a cloth moistened with distilled water.

Liability

To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against PR electronics A/S that would otherwise exist according to the concluded sales agreement.


How to demount system 5000

First, remember to demount the connectors with hazardous voltages.

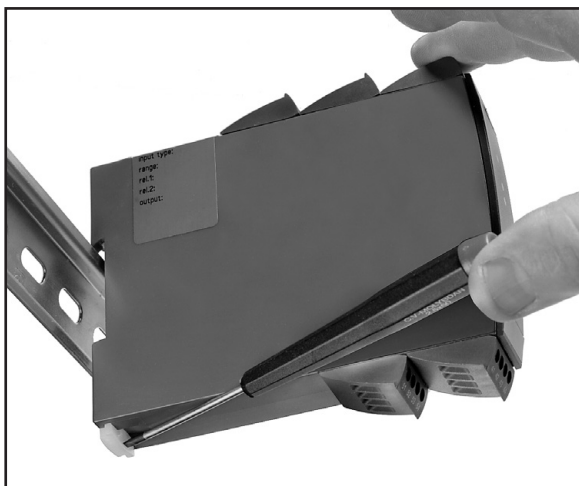


Picture 1:

By lifting the bottom lock, the device is detached from the DIN rail.

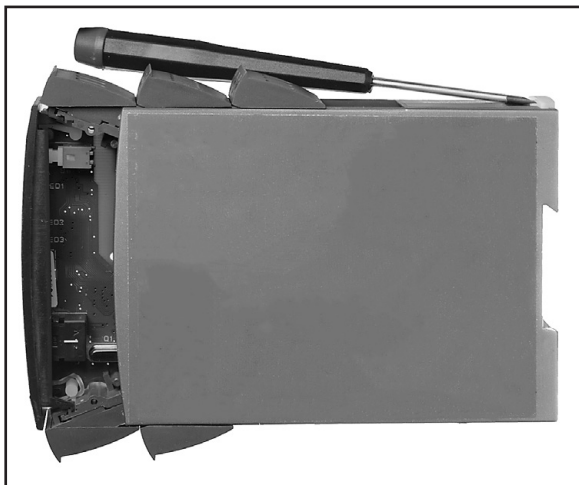

Picture 2:

By lifting the upper lock and pulling the front plate simultaneously the PCB can be removed. Switches and jumpers can now be adjusted.

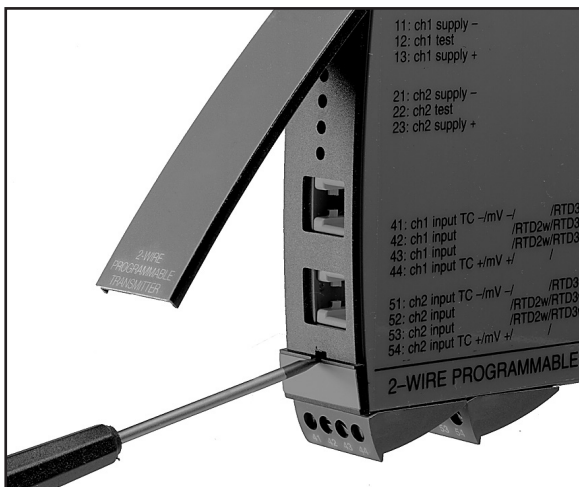

Picture 3:

Access to programming connector

Programmable transmitter 5131

- Input for RTD, TC, mV, linear resistance, mA, and V
- 3.75 kVAC galvanic isolation
- 4...20 mA loop output
- 1- and 2-channel versions
- DIN rail mounting

Application

• Electronic temperature measurement with resistance sensor or thermocouple sensor. • Ex barrier for temperature sensors, potentiometers and current / voltage signals. • Conversion of current signals from supplied transmitters to 2-wire 4...20 mA signals. • Amplification of mV signals. • Conversion of linear resistance variation. • Galvanic isolation of analog signals. • Measurement of floating signals. • Linearisation of non-linear Ohm, mV, mA, or voltage signals. • Separation of circuits in PELV/SELV installations.

Technical characteristics

The unit is based on a microprocessor core with an efficient program operation. The basic calibration data and present set-up are stored in an EEPROM thereby avoiding the loss or change of data at power off. The 2-channel version has full galvanic isolation between the channels. By way of a jumper on the PCB the input in the standard version can be programmed either for a temperature or a current / voltage input. This means that one channel can work as for instance a temperature transmitter and the other can work as an isolation amplifier. Measurement range, signal parameters, and output span are configured to the present task by way of a PC and PR electronics A/S' communications interface Loop Link.

Input types

Temperature input - jumper in position 1:

Thermocouple input (TC) for standard thermocouples type B, E, J, K, L, N, R, S, T, U, W3, W5, LR according to the norms IEC 584, DIN 43710, ASTM E988-90 and GOST 3044-84.

The CJC can be selected in 3 different ways: internally in the terminal, externally by way of a Pt100 / Ni100 sensor, or externally with a constant temperature. If internal compensation is selected, a terminal with a built-in temperature sensor must be ordered separately (PR type no. 5910 and 5913). Sensor error detection is available.

RTD input for Pt100...Pt1000 according to the norm IEC 751 and Ni100...Ni1000 according to the norm DIN 43760. Automatic cable compensation at a 3- or 4-wire connection. At a 2-wire connection the cable resistance can be entered or measured by the configuration program and sent to the device which then compensates by the entered cable resistance. Sensor error detection is available.

Resistance input for resistance measurement with cable compensation as described under the RTD input. Sensor error detection is available.

The **mV input** is programmable in the range -150...+150 mV.

Current / voltage input - jumper in position 2:

The **current input** is programmable in the range 0...100 mA, for instance 4...20 mA.

The **voltage input** is programmable in the range 0...250 VDC.

Output

Standard loop 4...20 mA current output. The output signal is proportional and linear to the value of the input signal. Special set-ups can be selected in the configuration program, for instance a customised linearisation, a reversed output, a limiter according to the selected output span, and selection of an output value in case of a sensor error. Maximum load on the current output is 1375 Ω .

Sensor error detection

The output can be set up at a RTD, thermocouple and linear resistance input to go to max., to min., entered value, NAMUR NE43 Upscale or Downscale at sensor error detection.

Configuration

The transmitter is configured to the present task by way of a and PR electronics A/S' communications interface Loop Link. The transmitter can be configured with or without a connected supply voltage as the communications interface supplies the necessary voltage to the set-up. The communications interface is galvanically isolated to protect the PC port. Communication is 2-way to allow the retrieval of the transmitter set-up into the PC and to allow the transmission of the PC set-up to the transmitter. For users who do not wish to do the set-up themselves, the 5131 can be delivered configured according to customer specifications: input type, measurement range, sensor error detection, and output signal.

Order

Type	Associated apparatus	Input	Channels
5131	No : A	RTD / TC / R / mA / V / mV	Single : A
	Yes : B	RTD / TC / mV / R : 1	Double : B
		mA / V / mV : 2	
		Channel 1, RTD / TC / mV / R : 3	
		Channel 2, mA / V / mV	

Example: 5131B3B

NB! For TC inputs with internal CJC, remember to order the CJC connectors type 5910 / 5910Ex (ch. 1) and 5913 / 5913Ex (ch. 2).

Electrical specifications

Environmental conditions

Operating temperature	-20°C to +60°C
Calibration temperature.	20...28°C
Relative humidity	< 95% RH (non-cond.)
Protection degree	IP20

Mechanical specifications

Dimensions (HxWxD)	109 x 23.5 x 130 mm
DIN rail type.	DIN EN 60715 - 35 mm
Weight	195 g
Wire size (min...max.)	0.13...2.08 mm ² AWG 26...14 stranded wire
Screw terminal torque.	0.5 Nm

Common specifications

Supply voltage	7.5...35 VDC
Fuse	50 mA SB / 250 VAC
Consumption during programming	3...8 mA
Max. required power, 1 / 2 channels	0.8 W / 1.6 W
Isolation voltage, test / operation.	3.75 kVAC / 250 VAC
PELV/SELV.	IEC 61140
Programming	Loop Link
Signal / noise ratio.	Min. 60 dB (0...100 kHz)
Updating time:	
Temperature input.	115 ms
mA / V / mV input	75 ms
Response time (0...90%, 100...10%), programmable:	
Temperature input.	400 ms...60 s
mA / V / mV input	250 ms...60 s
Signal dynamics, input	22 bit
Signal dynamics, output	16 bit
Effect of supply voltage change.	< 0.005% of span / VDC

Accuracy, the greater of the general and basic values:

General values		
Input type	Absolute accuracy	Temperature coefficient
All	$\leq \pm 0.05\%$ of span	$\leq \pm 0.01\%$ of span / °C

Basic values		
Input type	Basic accuracy	Temperature coefficient
mA	$\leq \pm 4 \mu\text{A}$	$\leq \pm 0.4 \mu\text{A} / ^\circ\text{C}$
Volt	$\leq \pm 10 \mu\text{V}$	$\leq \pm 1 \mu\text{V} / ^\circ\text{C}$
RTD	$\leq \pm 0.2^\circ\text{C}$	$\leq \pm 0.01^\circ\text{C} / ^\circ\text{C}$
Lin. R	$\leq \pm 0.1\Omega$	$\leq \pm 10 \text{ m}\Omega / ^\circ\text{C}$
TC type: E, J, K, L, N, T, U	$\leq \pm 1^\circ\text{C}$	$\leq \pm 0.05^\circ\text{C} / ^\circ\text{C}$
TC type: B, R, S, W3, W5, LR	$\leq \pm 2^\circ\text{C}$	$\leq \pm 0.2^\circ\text{C} / ^\circ\text{C}$

EMC - immunity influence.	$< \pm 0.5\%$ of span
Extended EMC immunity: NAMUR NE 21, A criterion, burst	$< \pm 1\%$ of span

Electrical specifications, temperature input

TC input

Type	Min. value	Max. value	Min. span	Standard
B	+400°C	+1820°C	200°C	IEC 60584-1
E	-100°C	+1000°C	50°C	IEC 60584-1
J	-100°C	+1200°C	50°C	IEC 60584-1
K	-180°C	+1372°C	50°C	IEC 60584-1
L	-100°C	+900°C	50°C	DIN 43710
N	-180°C	+1300°C	100°C	IEC 60584-1
R	-50°C	+1760°C	200°C	IEC 60584-1
S	-50°C	+1760°C	200°C	IEC 60584-1
T	-200°C	+400°C	50°C	IEC 60584-1
U	-200°C	+600°C	75°C	DIN 43710
W3	0°C	+2300°C	200°C	ASTM E988-90
W5	0°C	+2300°C	200°C	ASTM E988-90
LR	-200°C	+800°C	50°C	GOST 3044-84

Max. offset 50% of selec. max. value

Sensor error current Nom. 30 μA

CJC $\leq \pm 1^\circ\text{C}$

Sensor error detection Yes

mV input

Measurement range -150...+150 mV

Min. measurement range 5 mV

Max. offset 50% of selec. max. value

Input resistance Nom. 10 M Ω

RTD and linear resistance input

Input type	Min. value	Max. value	Min. span	Standard
Pt100	-200°C	+850°C	25°C	IEC 60751
Ni100	-60°C	+250°C	25°C	DIN 43760
Linear resist.	0 Ω	5000 Ω	30 Ω	-

Max. offset	50% of selec. max. value
Max. cable resistance per wire.	10 Ω
Sensor current	Nom. 0.2 mA
Effect of sensor cable resistance, (3- / 4-wire)	< 0.002 Ω / Ω
Sensor error detection	Yes

Electrical specifications, mA / V / mV input

Current input

Measurement range	0...100 mA
Min. measurement range (span)	4 mA
Max. offset	50% of selec. max. value
Input resistance:	
Supplied unit	Nom. 10 Ω + PTC 10 Ω
Non-supplied unit	$R_{SHUNT} = \infty$, $V_{DROP} < 6$ V

Voltage input

Measurement range	0...250 VDC
Min. measurement range (span)	5 mVDC
Max. offset	50% of selec. max. value
Input resistance ≤ 2.5 VDC	Nom. 10 M Ω
> 2.5 VDC	Nom. 5 M Ω

Electrical specifications - OUTPUT

Signal range (span)	4...20 mA
Min. signal range (span).	10 mA
Max. offset	50% of selec. max. value
Load resistance.	$\leq (V_{\text{supply}} - 7.5) / 0.023 \text{ A } [\Omega]$
Load stability	$\leq 0.01\%$ of span / 100 Ω
Current limit.	$\leq 28 \text{ mA}$

Sensor error detection

Programmable	3.5...23 mA
NAMUR NE43 Upscale	23 mA
NAMUR NE43 Downscale	3.5 mA
No function	Not defined

Of span = Of the presently selected range

Observed authority requirements

EMC	2014/30/EU
LVD	2014/35/EU
ATEX	2014/34/EU
RoHS	2011/65/EU
EAC	TR-CU 020/2011
EAC Ex	TR-CU 012/2011


I.S. / Ex approvals

ATEX	DEKRA 24ATEX0020
IECEX	DEK 24.0017
EAC Ex	EAEU KZ 7500361.01.01.10203
CCC	Pending


Selection of input type (5131A)

Input	JP 1	JP 2
Temperature channel 1	1	-
Temperature channel 2	-	1
Current / voltage channel 1	2	-
Current / voltage channel 2	-	2

5131 connection to Loop Link

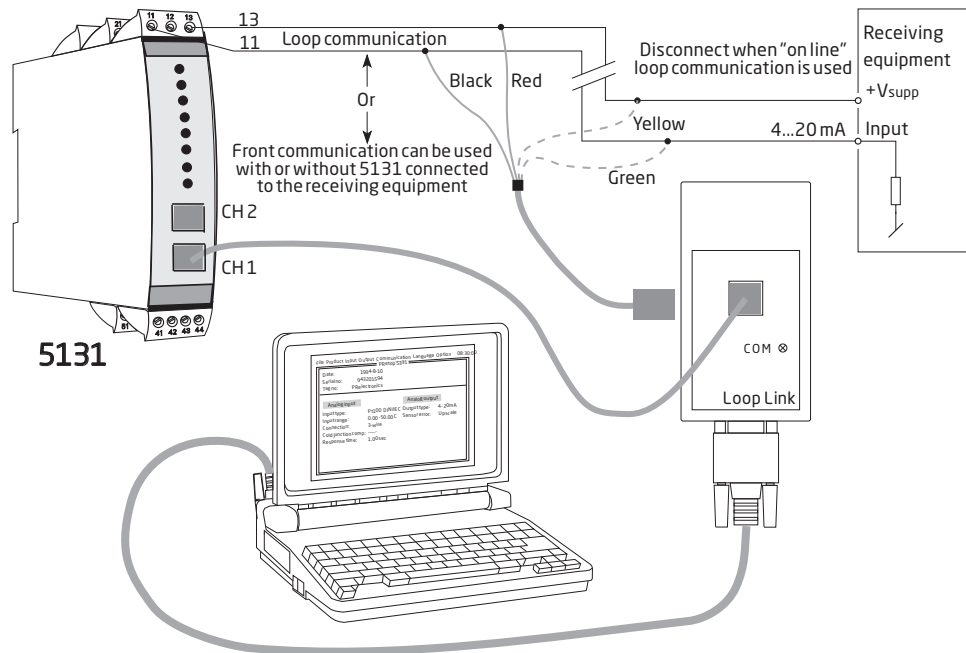

* Accessories: 5910 cJCconnector CH1, 5913 cJCconnector CH2.

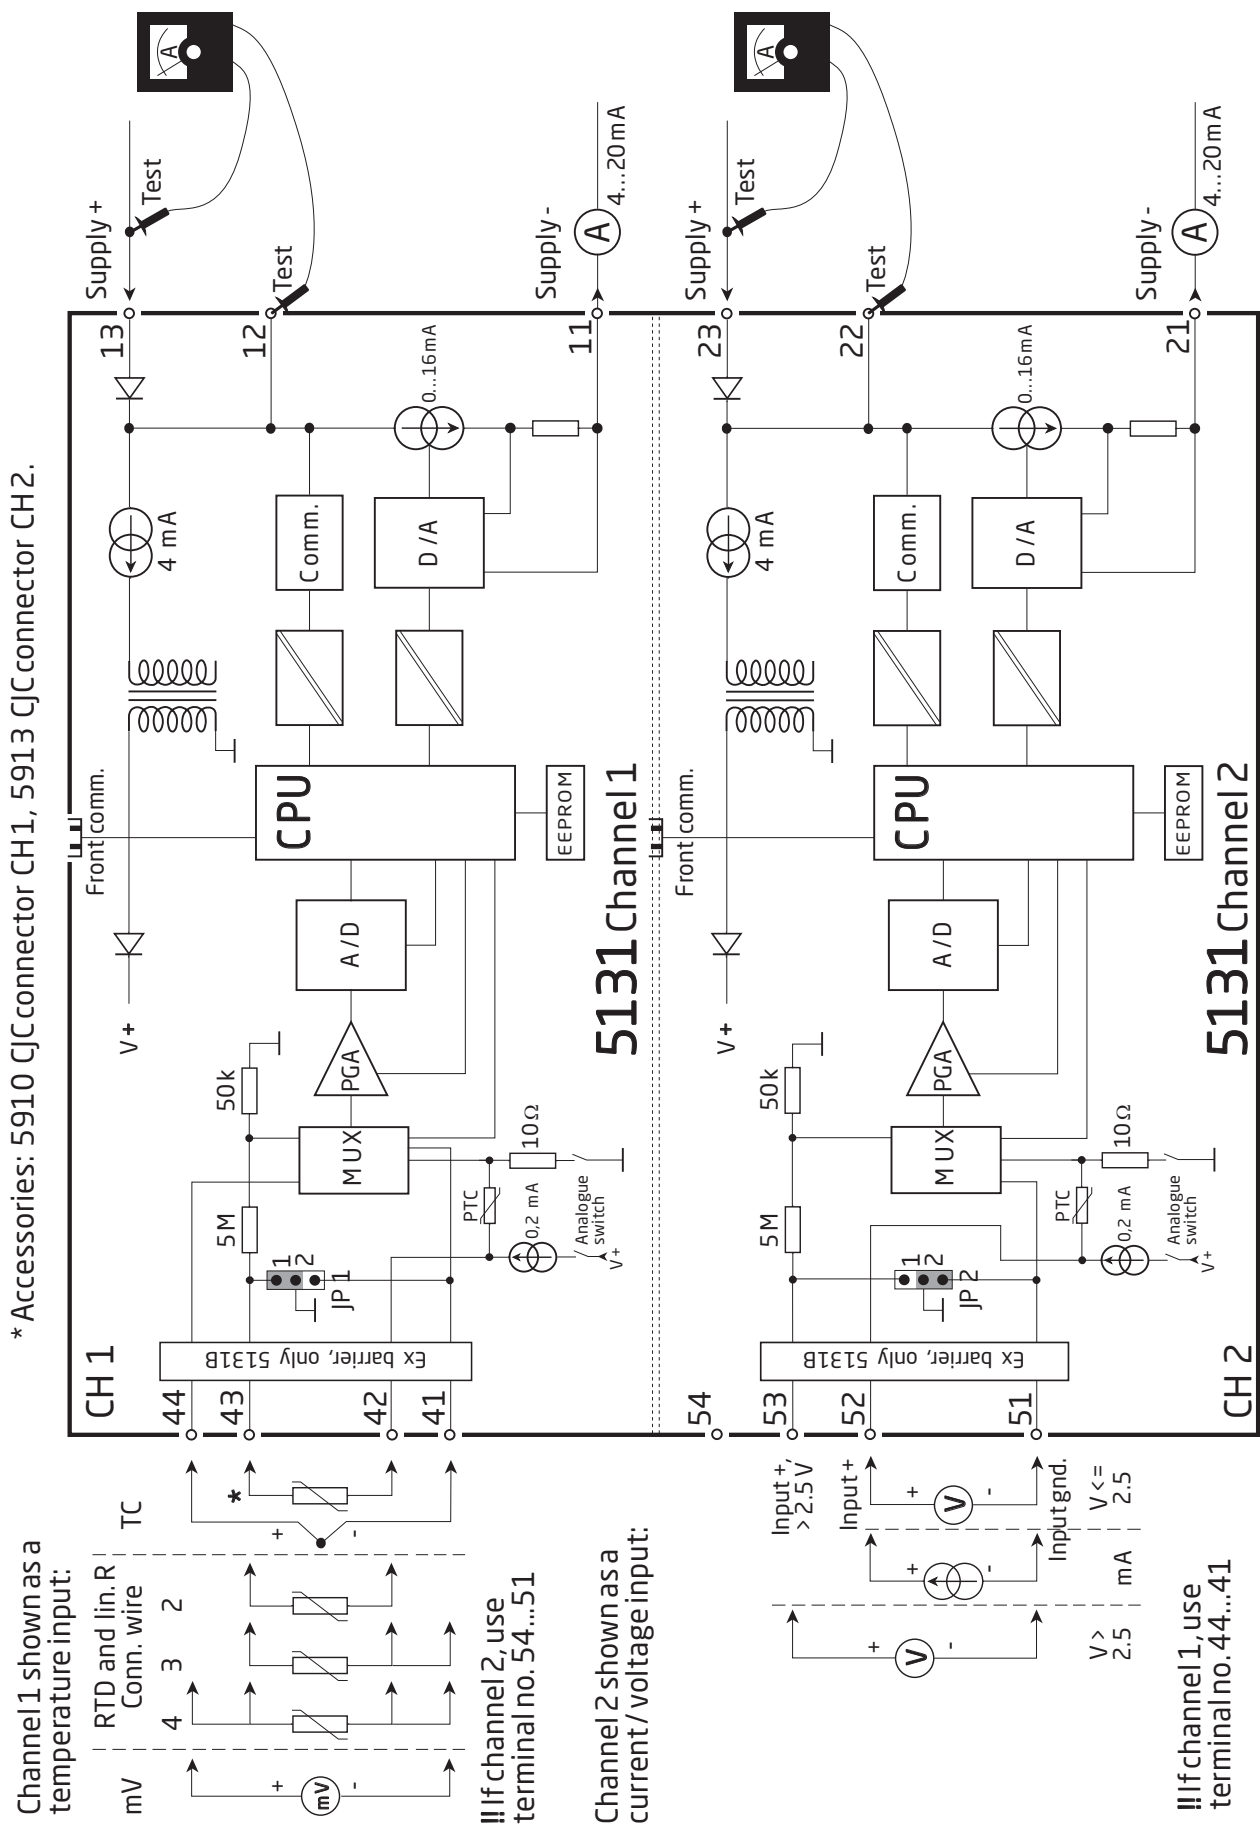

ATEX Installation drawing



For safe installation of 5131B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate DEKRA 24ATEX0020


Marking



II (1) G [Ex ia Ga] IIC/IIB/IIA
II (1) D [Ex ia Da] IIIC

Hazardous Area
Zone 0, 1, 2, 20, 21, 22

Non-Hazardous Area
-20°C ≤ Ta ≤ 60°C

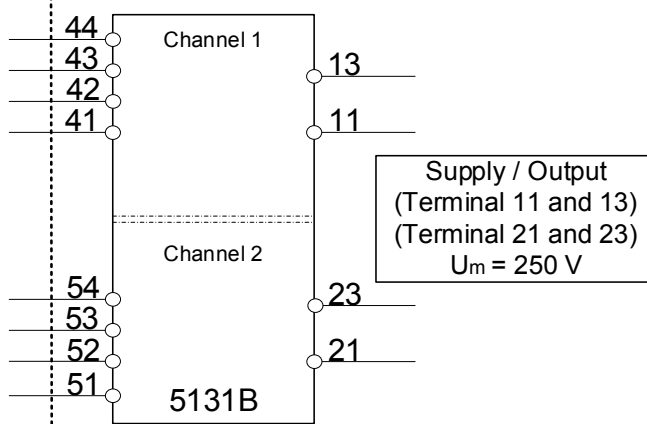

5131B1A/B: Terminal 41-44 and 51-54 5131B2A/B: Terminal 41-43 and 51-53 5131B3B: Terminal 41-44 and 51-53		Group	Co	Lo
Uo	8.0 V			
Io	10.0 mA			
Po	20 mW			
		IIC	8 µF	350 mH
		IIB, IIIC	95 µF	1000 mH
		IIA	1000 µF	1000 mH

Inputs and loop supply outputs are all galvanic isolated from each other. When two or more units are placed next to each other it has to be assured that all the Ex-terminal numbers 41...44 and 51...54 are placed on the same side and are separated from the frame and the non-intrinsically safe circuits of the units which could be mounted above or below it.

Programming of the 5131B:

Programming of the 5131B module is done by use of Loop Link 5909 outside hazardous area. For the dedicated LoopLink ports Um=60V (J101 and J301). No sensors located in the hazardous area are allowed to be connected to the 5131B while using LoopLink 5909.

Troubleshooting/maintenance:

The output current of the module can be measured without disconnection any wires/cables by placing a handheld ampere meter between port 12 and port 13 (same applies for port 22 and 23). For these ports Um = 0V. No permanent cables are allowed to be installed in port 12 or port 22.

IECEX Installation drawing



For safe installation of 5131B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

IECEX Certificate IECEX DEK 24.0017


Marking

IECEX

[Ex ia Ga] IIC/IIB/IIA
[Ex ia Da] IIIC

Hazardous Area
Zone 0, 1, 2, 20, 21, 22

Non-Hazardous Area
-20°C ≤ Ta ≤ 60°C

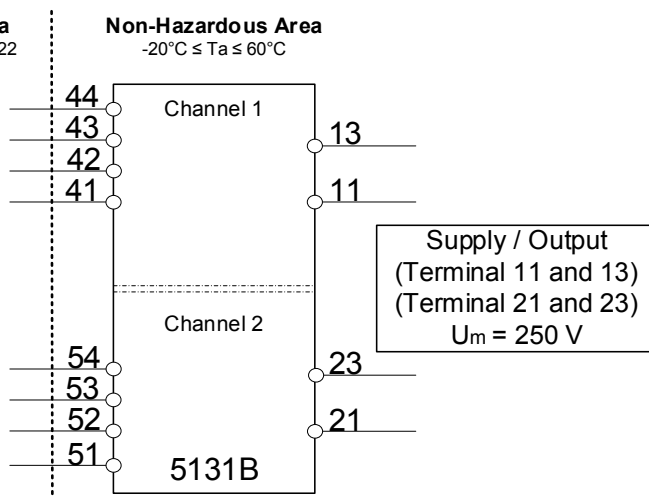

5131B1A/B: Terminal 41-44 and 51-54 5131B2A/B: Terminal 41-43 and 51-53 5131B3B: Terminal 41-44 and 51-53		Group	Co	Lo
Uo	8.0 V			
Io	10.0 mA			
Po	20 mW			

Inputs and loop supply outputs are all galvanic isolated from each other. When two or more units are placed next to each other it has to be assured that all the Ex-terminal numbers 41...44 and 51...54 are placed on the same side and are separated from the frame and the non-intrinsically safe circuits of the units which could be mounted above or below it.

Programming of the 5131B:

Programming of the 5131B module is done by use of Loop Link 5909 outside hazardous area. For the dedicated LoopLink ports Um=60V (J101 and J301). No sensors located in the hazardous area are allowed to be connected to the 5131B while using LoopLink 5909.

Troubleshooting/maintenance:

The output current of the module can be measured without disconnection any wires/cables by placing a handheld ampere meter between port 12 and port 13 (same applies for port 22 and 23).

For these ports Um = 0V. No permanent cables are allowed to be installed in port 12 or port 22.

Document history

The following list provides notes concerning revisions of this document.

Rev. ID	Date	Notes
105	2208	Safety instructions updated acc. to LVD.
106	2526	ATEX approval updated. IECEx approval added.

We are near you, *all over the world*

Our trusted red boxes are supported wherever you are

All our devices are backed by expert service and a 5-year warranty. With each product you purchase, you receive personal technical support and guidance, day-to-day delivery, repair without charge within the warranty period and easily accessible documentation.

We are headquartered in Denmark, and have offices and authorized partners the world over. We are a local

business with a global reach. This means that we are always nearby and know your local markets well. We are committed to your satisfaction and provide PERFORMANCE MADE SMARTER all around the world.

For more information on our warranty program, or to meet with a sales representative in your region, visit prelectronics.com.

Benefit today from ***PERFORMANCE MADE SMARTER***

PR electronics is the leading technology company specialized in making industrial process control safer, more reliable and more efficient. Since 1974, we have been dedicated to perfecting our core competence of innovating high precision technology with low power consumption. This dedication continues to set new standards for products communicating, monitoring and connecting our customers' process measurement points to their process control systems.

Our innovative, patented technologies are derived from our extensive R&D facilities and from having a great understanding of our customers' needs and processes. We are guided by principles of simplicity, focus, courage and excellence, enabling some of the world's greatest companies to achieve PERFORMANCE MADE SMARTER.