

5332N, 5332A & 5332D



**DK** ADVARSEL

Følgende operationer bør kun udføres på modulet i spændingsløs tilstand og under ESD-sikre forhold. Installation, ledningsmontage og demontage. Fejlfinding på modulet. Reparation af modulet må kun foretages af PR electronics A/S.

**ADVARSEL**

PR Loop Link programmeringsenheden må ikke benyttes til kommunikation med moduler installeret i Ex-område. Enhederne skal installeres i henhold til den tilhørende installations vejledning ved montering i eksplosionsfarlig område.

**SIKKERHEDSREGLER**

**Modtagelse og udpakning**  
Udpak modulet uden at beskadige det. Kontrollér ved modtagelsen, at modultypen svarer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på blivende plads.

**Miljøforhold**

Undgå direkte sollys, kraftigt støj eller varme, mekaniske tryk og støv, og udsæt ikke modulet for regn eller kraftigt fugt. Om nødvendigt skal opsætning og demontage ske inden for grænser for omgivelsestemperatur, forhindres ved hjælp af ventilation.

**Installation**

Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendte med de tekniske udtryk, advarsler og instruktioner i installationsvejledningen og som vil følge disse. Hvis der er tvivl om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler eller alternativt direkte til PR electronics A/S. Installation og tilslutning af modulet skal følge landets gældende regler for installation af elektrisk materiel bl.a. med hensyn til ledningsværnsalt, for sikring og placering. Beskrivelse af indgang / udgang og forsyningsforbindelser findes i produktmanualen, som kan hentes på [www.prellectronics.dk](http://www.prellectronics.dk).

**Kalibrering og justering**

Under kalibrering og justering skal måling og tilslutning af eksterne spændinger udføres i henhold til denne installationsvejledning, og teknikeren skal benytte sikkerhedsmæssigt korrekt værktøjer og instrumenter.

**Rengøring**

Modulet må, i spændingsløs tilstand, rengøres med en klud let fugtet med destilleret vand.

**PC-programmering af SYSTEM 5300**

Modulet konfigureres til den aktuelle opgave ved hjælp af en PC og PR electronics A/S' kommunikationsinterface Loop Link. Det er muligt at konfigurere modulet både med og uden tilsluttet forsyningsspænding. Idet kommunikationsinterface leverer nødvendig forsyning til opsettningen. Kommunikationsinterface er galvanisk isoleret, så PCens port er optimalt beskyttet. Kommunikationen er 2-vejs, så modulets opsætning kan hentes ind i PC'en, og opsettningen i PC'en kan sendes til modulet. For de brugere, der ikke selv vil foretage opsætning, kan modulet leveres konfigureret efter oplyst specifikation: indgangstype, måleområde, følerfejlsdetektering og udgangssignal.

**Elektriske specifikationer**

Specifikationsområde	-40°C til +85°C
Forsyningsspænding, 5332N & 5332A	7.2...35 VDC
Internt effekttab, 5332N & 5332A	25 mW...0.8 W
Forsyningsspænding, 5332D	7.2...30 VDC
Internt effekttab, 5332D	25 mW...0.7 W
Kalibreringstemperatur	20...28°C
Relativ fugtighed	< 95% RH (ikke kond.)
Mål	Ø44 x 20.2 mm
Kapslingsklasse (hus/klemme)	IP68 / IP00
<b>Indgangstyper</b>	
P1100	-200°C...+850°C
N1100	-60°C...+250°C
Lin. R	0 Ω...5000 Ω
<b>Strømodgang</b>	
Signalområde	4...20 mA
Min. signalamplitude	16 mA
Belastningsmodstand, Ω	≤ (V <sub>forsyn</sub> -7.2 V)/0.023

<b>Overholde myndighedskrav</b>	
EMC	2014/30/EU & UK SI 2016/1091
ATEX	2014/34/EU & UK SI 2016/1107
RoHS	2011/65/EU & UK SI 2012/3032
EAC	TR-CU 020/2011
EAC Ex	TR-CU 012/2011
<b>Godkendelser</b>	
EAC Ex	RU C-DK.HA65.B.00355/19

**UK** WARNING

The following operations should only be carried out on a disconnected device and under ESD safe conditions: General mounting, connection and disconnection of wires. Troubleshooting the device. Repair of the device must be done by PR electronics A/S only.

**WARNING**

Do not use the Loop Link programming interface to program the units in Ex area. For installation in classified area the modules must be installed according to the appropriate installation drawings.

**SAFETY INSTRUCTIONS**

**Receipt and unpacking**  
Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

**Environment**

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

**Mounting**

Only qualified technicians who are familiar with the technical terms, warnings, and instructions in this installation guide and who are able to follow these should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively, PR electronics A/S. Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in the product manual found on [www.prellectronics.com](http://www.prellectronics.com).

**Calibration and adjustment**

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this installation guide. The technician must use tools and instruments that are safe to use.

**Cleaning**

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

**PC programming of SYSTEM 5300**

The device is configured to the present task by way of a PC and PR electronics A/S' communications interface Loop Link. The device can be configured with or without a connected supply voltage as the communications interface supplies the necessary voltage to the set-up. The communications interface is galvanically isolated to protect the PC port. Communication is 2-way to allow the retrieval of the device set-up into the PC and to allow the transmission of the PC set-up to the device. For users who do not wish to do the set-up themselves, the device can be delivered configured according to customer specifications: input type, measurement range, sensor error detection, and output signal.

**Electrical specifications**

Specifications range	-40°C to +85°C
Supply voltage, 5332N & 5332A	7.2...35 VDC
Internal power dissipation, 5332N & 5332A	25 mW...0.8 W
Supply voltage, 5332D	7.2...30 VDC
Internal power dissipation, 5332D	25 mW...0.7 W
Calibration temperature	20...28°C
Relative humidity	< 95% RH (non-cond.)
Dimensions	Ø44 x 20.2 mm
Protection degree (enc./terminal)	IP68 / IP00
<b>Input types</b>	
P1100	-200°C...+850°C
N1100	-60°C...+250°C
Lin. R	0 Ω...5000 Ω
<b>Current output</b>	
Signal range	4...20 mA
Min. signal range	16 mA
Load resistance, Ω	≤ (V <sub>supply</sub> -7.2 V)/0.023

<b>Observed authority requirements</b>	
EMC	2014/30/EU & UK SI 2016/1091
ATEX	2014/34/EU & UK SI 2016/1107
RoHS	2011/65/EU & UK SI 2012/3032
EAC	TR-CU 020/2011
EAC Ex	TR-CU 012/2011
<b>Approvals</b>	
EAC Ex	RU C-DK.HA65.B.00355/19

**FR** AVERTISSEMENT

Les opérations suivantes doivent être effectuées avec le module débranché et dans un environnement exempt de décharges électrostatiques (ESD): montage général, raccordement et débranchement de fils et recherche de panne sur le module. Seule PR electronics SARL est autorisée à réparer le module.

**AVERTISSEMENT**

Ne pas utiliser le kit de programmation "Loop Link" en zone classée dangereuse Ex. Pour des installations en zone classée, les modules doivent être monté conformément aux plans appropriés.

**CONSIGNES DE SECURITE**

**Réception et déballage**  
Déballez le module sans l'endommager. Il est recommandé de conserver l'emballage du module tant que ce dernier n'est pas définitivement monté. A la réception du module, vérifiez que le type de module reçu correspond à celui que vous avez commandé.

**Environnement**

N'exposez pas votre module aux rayons directs du soleil et choisissez un endroit à humidité modérée et à l'abri de la poussière, des températures élevées, des chocs et des vibrations mécaniques et de la pluie. Le cas échéant, des systèmes de ventilation permettent d'éviter qu'une pièce soit chauffée au-delà des limites prescrites pour les températures ambiantes.

**Montage**

Il est conseillé de réserver le raccordement du module aux techniciens qualifiés qui connaissent les termes techniques, les avertissements et les instructions de ce guide et qui sont capables d'appliquer ces derniers. Si vous avez un doute quelconque quant à la manipulation du module, veuillez contacter votre distributeur local. Vous pouvez également vous adresser à PR electronics SARL. Le montage et le raccordement du module doivent être conformes à la législation nationale en vigueur pour le montage de matériaux électriques, par exemple, diamètres des fils, fusibles de protection et implantation des modules. Les connexions des alimentations et des entrées / sorties sont décrites dans le manuel du produit sur [www.prellectronics.fr](http://www.prellectronics.fr).

**Etalonnage et réglage**

Lors des opérations d'étalonnage et de réglage, il convient d'effectuer les mesures et les connexions des tensions externes en respectant les spécifications mentionnées dans ce guide. Les techniciens doivent utiliser des outils et des instruments pouvant être manipulés en toute sécurité.

**Entretien et nettoyage**

Lors de la maintenance, le module doit être nettoyé avec un chiffon imbibé d'eau distillée.

**Programmation par PC du SYSTÈME 5300**

Le module peut être programmé en fonction d'une application donnée à partir d'un PC et le kit de programmation Loop Link de PR electronics A/S. Le module peut être programmé sans être alimenté car l'interface de communication fournit l'alimentation nécessaire pour la configuration. L'interface de communication est dotée d'une isolation galvanique pour protéger le port du PC. La communication est bidirectionnelle. Cela permet non seulement la programmation du module mais également la récupération d'une configuration existante ainsi que la lecture du numéro de série et du repère. Le module peut être livré déjà programmé, si l'utilisateur le souhaite.

**Spécifications**

Plage de température	-40°C à +85°C
Tension d'alimentation, 5332N & 5332A	7.2...35 Vcc
Puissance dissipée, 5332N & 5332A	25 mW...0.8 W
Tension d'alimentation, 5332D	7.2...30 Vcc
Puissance dissipée, 5332D	25 mW...0.7 W
Température d'étalonnage	20...28°C
Humidité relative	< 95% HR (sans cond.)
Dimensions	Ø44 x 20.2 mm
Degré de protection (boîtier/bornier)	IP68 / IP00
<b>Types d'entrée</b>	
P1100	-200°C...+850°C
N1100	-60°C...+250°C
Lin. R	0 Ω...5000 Ω
<b>Résistance linéaire</b>	0 Ω...5000 Ω
<b>Sortie courant</b>	
Gamme de signal	4...20 mA
Plage de signal min	16 mA
Résistance de charge, Ω	≤ (V <sub>alim</sub> -7.2 V)/0.023

**Compatibilité avec les normes**

CEM	2014/30/UE & UK SI 2016/1091
ATEX	2014/34/UE & UK SI 2016/1107
RoHS	2011/65/UE & UK SI 2012/3032
EAC	TR-CU 020/2011
EAC Ex	TR-CU 012/2011
<b>Approbations</b>	
EAC Ex	RU C-DK.HA65.B.00355/19

**DE** WARNUNG

Folgende Maßnahmen sollten nur in spannungslosem Zustand des Gerätes und unter ESD-sicheren Verhältnisse durchgeführt werden: Installation, Montage und Demontage von Leitungen. Fehleruche im Gerät, und Reparaturen des Gerätes dürfen nur von PR electronics A/S vorgenommen werden.

**WARNUNG**

Benutzen Sie die Programmierschnittstelle Loop Link nicht im Ex Bereich. Zur Montage in klassifizierten Zonen müssen die Geräte nach den dazugehörigen Einbauezeichnungen installiert werden.

**SICHERHEITSGESETZ**

**Empfang und Auspacken**  
Packen Sie das Gerät aus, ohne es zu beschädigen, und kontrollieren Sie beim Empfang, ob der Gerätetyp Ihrer Bestellung entspricht. Die Verpackung sollte beim Gerät bleiben, bis dieses am endgültigen Platz montiert ist.

**Umgebungsbedingungen**

Direkte Sonneneinstrahlung, starke Staubentwicklung oder Hitze, mechanische Erschütterungen und Stöße sind zu vermeiden; das Gerät darf nicht Regen oder starker Feuchtigkeit ausgesetzt werden. Bei Bedarf muss eine Erwärmung, welche die angegebenen Grenzen für die Umgebungstemperatur überschreitet, mit Hilfe eines Kühlgebläses verhindert werden.

**Installation**

Das Gerät darf nur von qualifizierten Technikern angeschlossen werden, die mit den technischen Ausdrücken, Warnungen und Anweisungen in dieser Installationsanleitung vertraut sind und diese befolgen. Sollten Zweifel bezüglich der richtigen Handhabung des Gerätes bestehen, sollte man mit dem Händler vor Ort Kontakt aufnehmen. Sie können aber auch direkt mit PR electronics GmbH Kontakt aufnehmen. Die Installation und der Anschluss des Gerätes haben in Übereinstimmung mit den geltenden Regeln des jeweiligen Landes bez. der Installation elektrischer Apparaturen zu erfolgen, u.a. bezüglich Leitungsquerschnitt, (elektrischer) Vor-Absicherung und Positionierung. Eine Beschreibung von Eingangs- / Ausgangs- und Versorgungsanschlüssen befindet sich im Produkthandbuch, das unter [www.prellectronics.de](http://www.prellectronics.de) gefunden und abgerufen werden kann.

**Kalibrierung und Justierung**

Während der Kalibrierung und Justierung sind die Messung und der Anschluss externer Spannungen entsprechend dieser Installationsanleitung auszuführen, und der Techniker muss hierbei sicherheitsmäßig einwandfreie Werkzeuge und Instrumente benutzen.

**Reinigung**

Das Gerät darf in spannungslosem Zustand mit einem Lappen gereinigt werden, der mit destilliertem Wasser leicht angefeuchtet ist.

**PC-Programmierung des Systems 5300**


Das Gerät wird für die jeweilige Aufgabe mit Hilfe eines PCs und PR electronics A/S Kommunikationschnittstelle Loop Link konfiguriert. Es ist möglich, das Gerät sowohl mit als auch ohne angeschlossene Versorgungsspannung zu konfigurieren, da die Kommunikationsschnittstelle die notwendige Versorgung für die Einstellung liefert. Die Kommunikationsschnittstelle ist galvanisch isoliert, sodass der Anschluss des PCs optimal geschützt ist. Die Kommunikation erfolgt in beiden Richtungen, sodass die Einstellung des Gerätes in den PC geholt, und die Einstellung im PC an das Gerät gesandt werden kann. Für diejenigen Anwender, welche die Einstellung nicht selbst vornehmen wollen, kann das Gerät nach folgenden Kundenspezifikationen konfiguriert geliefert werden: Eingangstyp, Messbereich, Fehlererkennung und Ausgangssignal.

**Elektrische Daten**


Spezifikationsbereich	-40°C bis +85°C
Versorgungsspannung, 5332N & 5332A	7.2...35 VDC
Verlustleistung, 5332N & 5332A	25 mW...0.8 W
Versorgungsspannung, 5332D	7.2...30 VDC
Verlustleistung, 5332D	25 mW...0.7 W
Kalibreringstemperatur	20...28°C
Luftfeuchtigkeit	< 95% RF (nicht kond.)
Måb	Ø44 x 20.2 mm
Schutzart (Gehäuse / Anschluss)	IP68 / IP00
<b>Eingangs-Typen</b>	
P1100	-200°C...+850°C
N1100	-60°C...+250°C
Lin. R	0 Ω...5000 Ω
<b>Stromausgang</b>	
Signalbereich	4...20 mA
Min. Signalbereich	16 mA
Belastungswiderstand, Ω	≤ (V <sub>Versorg</sub> -7.2 V)/0.023

**Eingehaltene Behördenvorschriften**



EMV	2014/30/EU & UK SI 2016/1091
ATEX	2014/34/EU & UK SI 2016/1107
RoHS	2011/65/EU & UK SI 2012/3032
EAC	TR-CU 020/2011
EAC Ex	TR-CU 012/2011
<b>Zulassungen</b>	
EAC Ex	RU C-DK.HA65.B.00355/19

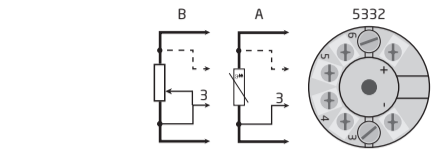

	DK	UK	FR	DE	5332
A	RTD	RTD	RTD	WTH	X
B	Lin R	Lin R	Lin R	Lin R	X

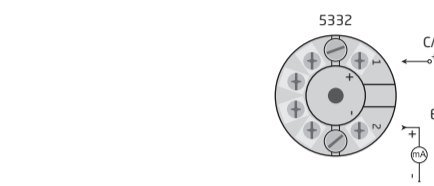



	DK	UK	FR	DE	5332N 5332A	5332D
C	Forsyning +7.2...35 VDC	Supply +7.2...35 VDC	Alimentation +7.2...35 Vcc	Versorgung +7.2...35 VDC	X	
D	Forsyning +7.2...30 VDC	Supply +7.2...30 VDC	Alimentation +7.2...30 Vcc	Versorgung +7.2...30 VDC		X
E	4...20 mA udgang	4...20 mA output	Sortie 4...20 mA	4...20 mA-Ausgang	X	X

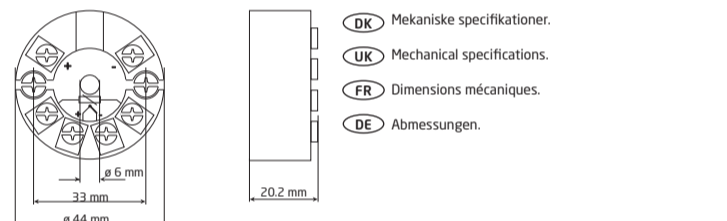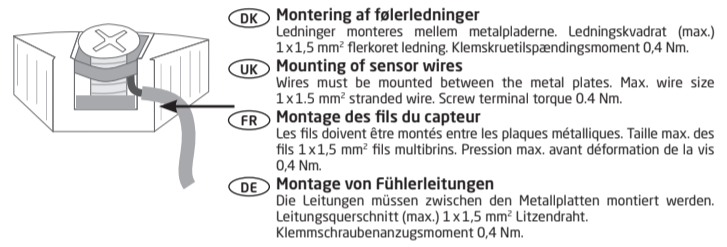

- DK** Dokumentation, godkendelser og yderligere information findes på internettet på [www.prellectronics.dk](http://www.prellectronics.dk)
- UK** Documentation, permits and other information can be found on the internet at [www.prellectronics.com](http://www.prellectronics.com)
- FR** La documentation et toute autre information peuvent être trouvées sur l'Internet sur notre site: [www.prellectronics.fr](http://www.prellectronics.fr)
- DE** Dokumentationen, Zulassungen und andere Informationen können auf unserer Internet-Seite unter [www.prellectronics.de](http://www.prellectronics.de) gefunden und abgerufen werden.
- BR** Documentações, licenças e outras informações podem ser encontradas no site [www.prellectronics.com](http://www.prellectronics.com)

- DK** Godkendelser
- UK** Approvals
- FR** Approbations
- DE** Zulassungen
- BR** Aprovações

ATEX	Area / Zone	Installation drawing	IECEX	Area / Zone	Installation drawing	FM	Zone / Div.	Installation drawing	CSA	Zone / Div.	Installation drawing	INMETRO	Zone / Div.	Installation drawing	
5332A	DEKRA 20ATEX0096 X	2, 22	5332QA02	DEK 20.0059X	2, 22	5332QI02			1125003	2 / Div 2	5331QC02	DEKRA 23.0009X	2, 22	5332QB02	
5332D	DEKRA 20ATEX0095 X	0, 1, 2, 21, 22, M1	5332QA01	DEK 20.0059X	0, 1, 2, 21, 22, M	5332QI01	F117US0013X	0, 1, 2 / Div 1, 2	5332QC01	1125003	0, 1, 2 / Div 1, 2	5333QC03	DEKRA 23.0009X	0, 1, 2, 21, 22, M	5332QB01

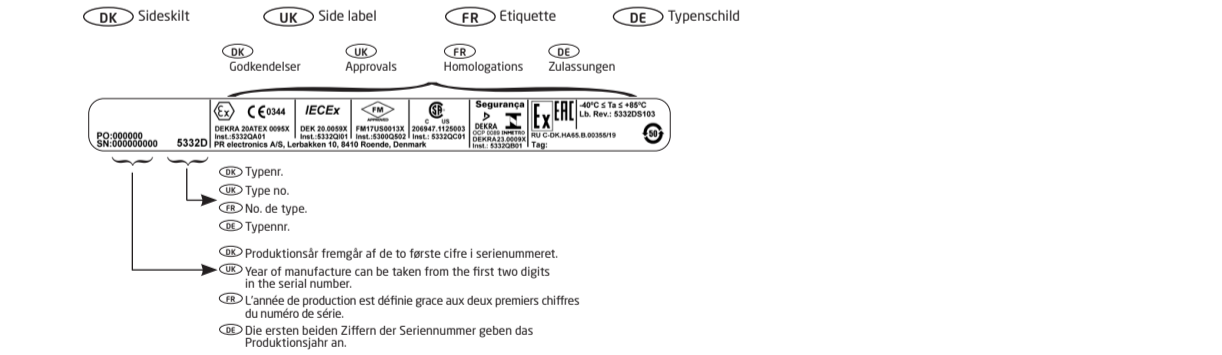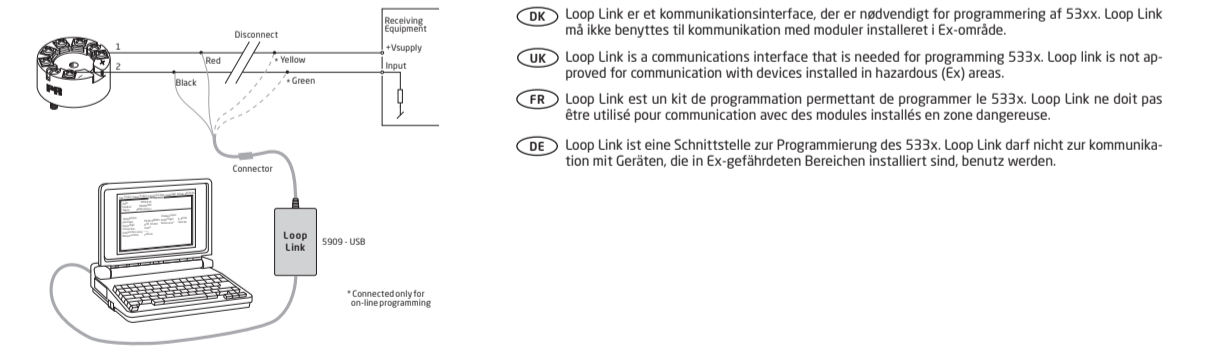

**EU DECLARATION OF CONFORMITY** (5332DoC\_106)

As manufacturer  
PR electronics A/S, Lerbakken 10, DK-8410 Rønde

hereby declares that the following products:  
Type: 5332  
Name: 2-wire programmable RTD transmitter  
From serial no.: 211661138

is in conformity with the following directives and standards:  
The EMC Directive 2014/53/EU and later amendments  
EN 61326-1: 2013  
Immunity test requirements for equipment intended to be used in an industrial electromagnetic environment. For specification of the acceptable EMC performance level, refer to the electrical specifications for the device.  
The ATEX Directive 2014/34/EU and later amendments  
EN IEC 60079-0: 2018, EN 60079-7: 2015 + A1: 2018, EN 60079-11: 2012 and EN 60079-15: 2010  
ATEX certificate: DEKRA 20ATEX0096 X (5332A)  
ATEX certificate: DEKRA 20ATEX0095 X (5332D)  
ATEX notified body (type approval):  
DEKRA Certification B.V.  
Heander 1051, 68225 PJ Arnhem  
P.O. Box 5185, 6802 ED Arnhem  
The Netherlands  
The RoHS Directive 2011/65/EU and later amendments  
EN IEC 63000: 2018  
Notified body 0344  
DEKRA Certification B.V.  
Heander 1051, 68225 PJ Arnhem  
P.O. Box 5185, 6802 ED Arnhem  
The Netherlands  
This declaration of conformity is issued under the sole responsibility of the manufacturer.  
Rønde, 2 November 2022  
Sieg Lindemann, CTO  
Manufacturer's signature

**UKCA DECLARATION OF CONFORMITY** (5332DoC\_UKCA\_100)

As manufacturer  
PR electronics A/S, Lerbakken 10, DK-8410 Rønde


hereby declares that the following product:  
Type: 5332  
Name: 2-wire programmable RTD transmitter  
From serial no.: 211661138

is in conformity with the following statutory requirements:  
The Electromagnetic Compatibility Regulations 2016 (UK SI 2016/1091) and later amendments  
EN 61326-1: 2013  
Immunity test requirements for equipment intended to be used in an industrial electromagnetic environment. For specification of the acceptable EMC performance level, refer to the electrical specifications for the device.  
The Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016 (UK SI 2016/1107) and later amendments  
EN IEC 60079-0: 2018, EN 60079-7: 2015 + A1: 2018, EN 60079-11: 2012 and EN 60079-15: 2010  
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK SI 2012/3032) and later amendments  
EN IEC 63000: 2018

**ATEX-installation drawing 5332QA01-V2R0**

For safe installation of 5332D the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate DEKRA 20ATEX0095 X  
 Marking Ex II 1 G Ex ia IIC T6...T4 Ga  
 II 2 D Ex ia IIIC Db  
 I M1 Ex ia I Ma  
 Standards EN 60079-0: 2018, EN 60079-11: 2012

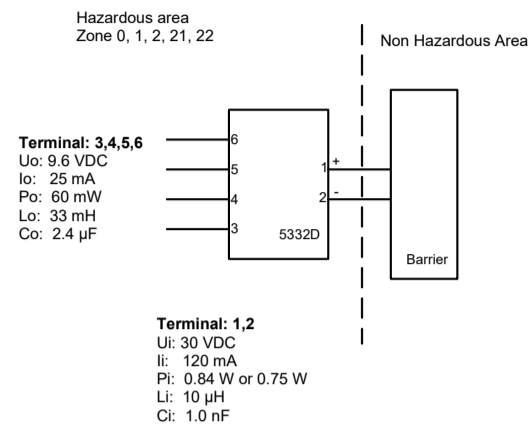

Temperature Class	Ambient temperature range	
	PI: 0,84 W	PI: 0,75 W
T6	-40°C to +47°C	-40°C to +50°C
T5	-40°C to +62°C	-40°C to +65°C
T4	-40°C to +85°C	-40°C to +85°C

**Installation notes**

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to EN 60529, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, and if the enclosure is made of aluminum, it must be installed such that ignition sources due to impact and friction sparks are excluded.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Db, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to EN 60079-0, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP54 according to EN 60529, and that is suitable for the application and correctly installed.  
 Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.  
 For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

**ATEX-installation drawing 5332QA02-V2R0**

For safe installation of 5332A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate DEKRA 20ATEX0096 X  
 Marking Ex II 3 G Ex nA [ic] IIC T6 ... T4 Gc  
 II 3 G Ex ec [ic] IIC T6 ... T4 Gc  
 II 3 G Ex ic IIC T6 ... T4 Gc  
 II 3 D Ex ic IIIC Dc  
 Standards EN 60079-0: 2018, EN 60079-11: 2012,  
 EN 60079-15: 2010, EN 60079-7:2015 +A1: 2018

Terminal 3,4,5,6	Terminal 1,2	Terminal 1,2	Terminal 1,2
Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex nA, Ex ec
Uo: 9,6 V Io: 25 mA Po: 60 mW Lo: 33 mH Co: 2,4 µF	Ui = 35 V Ii = 110 mA Ci = 1 nF Li = 10 µH	Ui = 24 V Ii = 260 mA Ci = 1 nF Li = 10 µH	Umax ≤ 35 VDC or Umax ≤ 24 VDC
Ambient temperature range			
Temperature Class	Ui=35V	Ui=24V	
T6	-40°C to +54°C	-40°C to +63°C	
T5	-40°C to +69°C	-40°C to +78°C	
T4	-40°C to +85°C	-40°C to +85°C	
Ambient temperature range			
Ex ec, Ex nA Temperature Class	Vmax=35V	Vmax=24V	
T6	-40°C to +43°C	-40°C to +55°C	
T5	-40°C to +85°C	-40°C to +85°C	
T4	-40°C to +85°C	-40°C to +85°C	


**Installation notes**

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex ic, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to EN 60529, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Dc, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to EN 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP54 according to EN 60079-0, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the equipment shall only be used in an area of not more than pollution degree 2, as defined in EN 60664-1.

**IECEx-installation drawing 5332QI01-V2R0**

For safe installation of 5332D the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 20.0059X  
 Marking Ex ia IIC T6...T4 Ga  
 Ex ia IIIC Db  
 Ex ia I Ma  
 Standards IEC 60079-0: 2017, IEC 60079-11: 2011

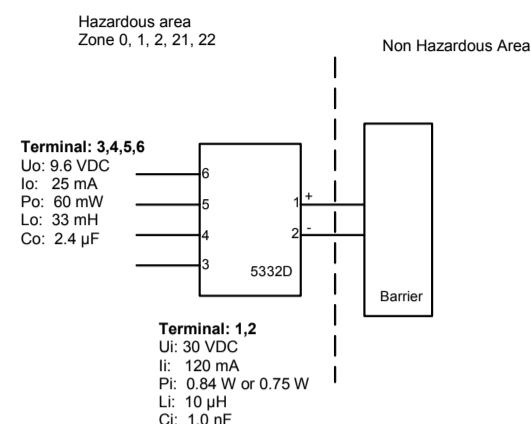

Temperature Class	Ambient temperature range	
	PI: 0,84 W	PI: 0,75 W
T6	-40°C to +47°C	-40°C to +50°C
T5	-40°C to +62°C	-40°C to +65°C
T4	-40°C to +85°C	-40°C to +85°C

**Installation notes**

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to IEC 60529, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, and if the enclosure is made of aluminum, it must be installed such that ignition sources due to impact and friction sparks are excluded.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Db, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to IEC 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP54 according to IEC 60529, and that is suitable for the application and correctly installed. Ambient temperature range: -40°C to +85°C.  
 Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.  
 For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

**IECEx-installation drawing 5332QI02-V2R0**

For safe installation of 5332A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 20.0059X  
 Marking Ex nA [ic] IIC T6 ... T4 Gc  
 Ex ec [ic] IIC T6 ... T4 Gc  
 Ex ic IIC T6 ... T4 Gc  
 Ex ic IIIC Dc  
 Standards IEC 60079-0: 2017, IEC 60079-11: 2011,  
 IEC 60079-15: 2010, IEC 60079-7:2017

Terminal 3,4,5,6	Terminal 1,2	Terminal 1,2	Terminal 1,2
Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex nA, Ex ec
Uo: 9,6 V Io: 25 mA Po: 60 mW Lo: 33 mH Co: 2,4 µF	Ui = 35 V Ii = 110 mA Ci = 1 nF Li = 10 µH	Ui = 24 V Ii = 260 mA Ci = 1 nF Li = 10 µH	Umax ≤ 35 VDC or Umax ≤ 24 VDC
Ambient temperature range			
Ex ic IIC, Ex ic IIIC Temperature Class	Ui=35V	Ui=24V	
T6	-40°C to +54°C	-40°C to +63°C	
T5	-40°C to +69°C	-40°C to +78°C	
T4	-40°C to +85°C	-40°C to +85°C	
Ambient temperature range			
Ex ec, Ex nA Temperature Class	Vmax=35V	Vmax=24V	
T6	-40°C to +43°C	-40°C to +55°C	
T5	-40°C to +85°C	-40°C to +85°C	
T4	-40°C to +85°C	-40°C to +85°C	


**Installation notes**

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex ic, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to IEC 60529, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Dc, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to EN 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.  
 If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the equipment shall only be used in an area of not more than pollution degree 2, as defined in IEC 60664-1.

**Desenho de Instalação INMETRO 5332QB01-V2R0**

Para instalação segura do 5332D o seguinte deve ser observado. O modelo deve apenas ser instalado por pessoas qualificadas que são familiarizadas com as leis nacionais e internacionais, diretrizes e padrões que se aplicam a esta área. O ano de fabricação pode ser pego dos dois primeiros dígitos do número de série.

Certificado DEKRA 23.0009 X  
 Marcas Ex ia IIC T6...T4 Ga  
 Ex ia IIIC Db  
 Ex ia I Ma  
 Normas ABNT NBR IEC 60079-0:2020 Versão Corrigida:2023  
 ABNT NBR IEC 60079-11:2013 Versão Corrigida:2017

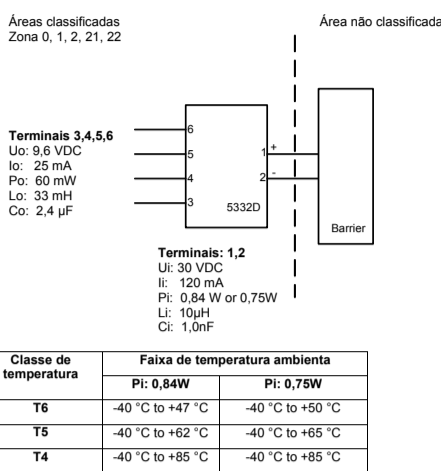

Classe de temperatura	Faixa de temperatura ambiente	
	PI: 0,84W	PI: 0,75W
T6	-40 °C to +47 °C	-40 °C to +50 °C
T5	-40 °C to +62 °C	-40 °C to +65 °C
T4	-40 °C to +85 °C	-40 °C to +85 °C

**Notas de instalação**

Se o invólucro for feito de materiais plásticos não metálicos, devem ser evitadas cargas eletrostáticas no invólucro do transmissor.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Ga, o transmissor deverá ser montado em um invólucro que forneça um grau de proteção de pelo menos IP20 de acordo com a ABNT NBR IEC 60529, e que seja adequado para a aplicação e corretamente instalado.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Db, o transmissor deverá ser montado em um invólucro certificado separadamente que forneça um grau de proteção de pelo menos IP5X de acordo com a ABNT NBR IEC 60079-0, e que seja adequado para o aplicativo e instalado corretamente. A temperatura da superfície do invólucro externo é +20 K acima da temperatura ambiente, determinada sem camada de poeira. Faixa de temperatura ambiente: -40 °C a +85 °C.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Ma, o transmissor deverá ser montado em um invólucro que forneça um grau de proteção de pelo menos IP54 de acordo com a ABNT NBR IEC 60529, e que seja adequado para a aplicação e corretamente instalado. Faixa de temperatura ambiente: -40 °C a +85 °C.  
 Devem ser utilizadas entradas de cabos e elementos de utilização adequados à aplicação e instalados corretamente.  
 Para uma temperatura ambiente ≥ 60°C, devem ser utilizados cabos resistentes ao calor com uma classificação de pelo menos 20 K acima da temperatura ambiente.

**Desenho de Instalação INMETRO 5332QB02-V2R0**

Para instalação segura do 5332A o seguinte deve ser observado. O modelo deve apenas ser instalado por pessoas qualificadas que são familiarizadas com as leis nacionais e internacionais, diretrizes e padrões que se aplicam a esta área. O ano de fabricação pode ser pego dos dois primeiros dígitos do número de série.

Certificado DEKRA 23.0009 X  
 Marcas Ex ec [ic] IIC T4, T6 Gc  
 Ex ic IIC T4, T6 Gc  
 Ex ic IIIC Dc  
 Normas ABNT NBR IEC 60079-0:2020 Versão Corrigida:2023  
 ABNT NBR IEC 60079-7:2018 Versão Corrigida:2022  
 ABNT NBR IEC 60079-11:2013 Versão Corrigida:2017


Terminais 3,4,5,6	Terminais 1,2	Terminais 1,2	Terminais 1,2
Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex ic IIC, Ex ic IIIC	Ex ec
Uo: 9,6 V Io: 25 mA Po: 60 mW Lo: 33 mH Co: 2,4 µF	Ui = 35 V Ii = 110 mA Ci = 1 nF Li = 10 µH	Ui = 24 V Ii = 260 mA Ci = 1 nF Li = 10 µH	Umax ≤ 35 Vdc or Umax ≤ 24 Vdc
Faixa de temperatura ambiente			
Ex ic IIC, Ex ic IIIC Classe de temperatura	Ui=35V	Ui=24V	
T6	-40 °C to +54 °C	-40 °C to +63 °C	
T5	-40 °C to +69 °C	-40 °C to +78 °C	
T4	-40 °C to +85 °C	-40 °C to +85 °C	
Faixa de temperatura ambiente			
Ex ec Classe de temperatura	Umax=35V	Umax=24V	
T6	-40 °C to +43 °C	-40 °C to +55 °C	
T5	-40 °C to +85 °C	-40 °C to +85 °C	
T4	-40 °C to +85 °C	-40 °C to +85 °C	

**Notas para instalação**

Se o invólucro for feito de materiais plásticos não metálicos, devem ser evitadas cargas eletrostáticas no invólucro do transmissor.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Gc e aplicado no tipo de proteção Ex ic, o transmissor deverá ser montado em um gabinete que forneça um grau de proteção de pelo menos IP20 de acordo com ABNT NBR IEC 60529, e adequado à aplicação e instalado corretamente.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Dc, o transmissor deverá ser montado em um invólucro certificado separadamente que forneça um grau de proteção de pelo menos IP5X de acordo com a ABNT NBR IEC 60079-0, e que seja adequado para o aplicativo e instalado corretamente. A temperatura da superfície do invólucro externo é +20 K acima da temperatura ambiente, determinada sem camada de poeira. Faixa de temperatura ambiente: -40 °C a +85 °C.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Gc e aplicado no tipo de proteção Ex ec, o transmissor deverá ser montado em um invólucro certificado separadamente que forneça um grau de proteção de pelo menos IP54 de acordo com a ABNT NBR IEC 60079-0, e que seja adequado à aplicação e instalado corretamente.  
 Se o transmissor for instalado em uma atmosfera explosiva que exija o uso de nível de proteção de equipamento Gc e aplicado no tipo de proteção Ex ec, o equipamento deverá ser usado somente em uma área com grau de poluição não superior a 2, conforme definido na IEC 60664-1.

**CSA Installation drawing 5332QC01 – V2R0**

Hazardous area T4: -40 °C to +85°C  
 T6: -40 °C to +60°C  
 Non Hazardous Area

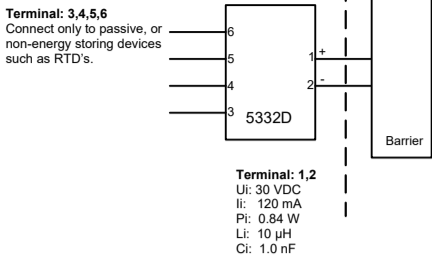

**CLASS 2258 04 - PROCESS CONTROL EQUIPMENT** - Intrinsically Safe Entry - For Hazardous Locations  
**CLASS 2258 84 - PROCESS CONTROL EQUIPMENT** - Intrinsically Safe Entry - For Hazardous Locations - Certified to US Standards

Class I, Division 1, Groups A, B, C and D T6...T4  
 Ex ia IIC T6...T4  
 Class I, Zone 0, AEx ia IIC Ga


**Warning:** Substitution of components may impair intrinsic safety.

The transmitters must be installed in a suitable enclosure to meet installation codes stipulated in the Canadian Electrical Code (CEC) or for US the National Electrical Code (NEC).

**CSA Installation drawing 5331QC02 – V2R0**

For safe installation of the 5331A and 5332A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Marking Class I, Division 2, Group A,B,C,D T6...T4  
 Ex nA[ic] IIC T6...T4  
 Class I Zone 2 AEx nA[ic] IIC T6...T4  
 Hazardous Area CL 1, Div 2, GP ABCD CL 1, Zone 2, IIC

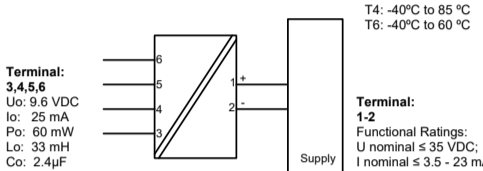


**NI Installation instructions**


The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC60529 that is suitable for the application and is correctly installed. Cable entry devices and blanking elements shall fulfill the same requirements. If the enclosure is made of non-metallic materials or of painted metal, electrostatic charging shall be avoided. Use supply wires with a rating of at least 5 K above the ambient temperature. Equipment from a Class 2 Power Supply with Transient protection or equivalent.  
**WARNING:** Substitution of components may impair suitability for Class I, Division 2  
**AVERTISSEMENT:** la substitution de composants peut nuire à l'aptitude à la Classe I, Division 2.  
**WARNING:** Do not disconnect equipment unless power has been switched off or the area is known to be safe.  
**AVERTISSEMENT:** Ne débrancher/chez pas l'équipement sauf si l'alimentation a été coupée ou si la zone est connue pour être sûre.  
**Non incandive field wiring installation**  
 The non incandive field Wiring Circuit concept allows interconnection of Nonincandive Field wiring Apparatus with Associated Nonincandive Field Wiring Apparatus or Associated Intrinsically Safe Apparatus or Associated Apparatus not specially examined in combination as a system using any of the wiring methods permitted for unclassified locations, Voc < Vmax, Ca >= Ci + Ccable, La >= Li + Lcable.

**FM Installation Drawing 5300Q502 V3R0**

**Model 5331D, 5332D, 5333D and 5343B**

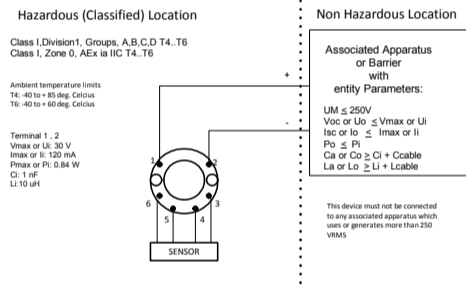

**Model 5335D, 5337D**

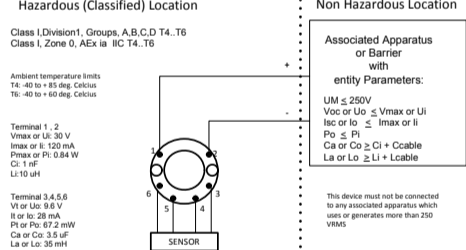


**The entity concept**

The Transmitter must be installed according to National Electrical Code (ANSI-NFPA 70) and shall be installed with the enclosure, mounting, and spacing segregation requirement of the ultimate application.  
 Equipment that is FM-approved for intrinsic safety may be connected to barriers based on the ENTITY CONCEPT. This concept permits interconnection of approved transmitters, meters and other devices in combinations which have not been specifically examined by FM, provided that the agency's criteria are met. The combination is then intrinsically safe, if the entity concept is acceptable to the authority having jurisdiction over the installation.  
 The entity concept criteria are as follows:  
 The intrinsically safe devices, other than barriers, must not be a source of power. The maximum voltage U0(Vmax) and current I0(Isc), and maximum power P0(Pmax), which the device can receive and remain intrinsically safe, must be equal to or greater than the voltage (Uo or Voc or V) and current (Io or Isc or Ii) and the power Po which can be delivered by the barrier.  
 The sum of the maximum unprotected capacitance (C) for each intrinsically device and the interconnecting wiring must be less than the capacitance (Cs) which can be safely connected to the barrier.  
 The sum of the maximum unprotected inductance (L) for each intrinsically device and the interconnecting wiring must be less than the inductance (Ls) which can be safely connected to the barrier.  
 The entity parameters Uo,Voc or V; Io,Isc or I; and Cs and Ls for barriers are provided by the barrier manufacturer.

**NI Field Circuit Parameters**

**Model 5331D, 5332D, 5333D, 5335D, 5337D and 5343B**

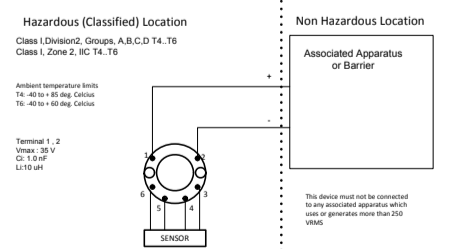

DK Kina RoHS UK China RoHS FR RoHS chinois DE China-RoHS

Part Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Printed circuit board	X	0	0	0	0	0

This table is prepared in accordance with the provisions of SJ/T 11364  
 O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 2657-2.  
 X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 2657-2.

The product's Environmentally Friendly Use Period (EFUP) is 50 years