

**DK****ADVARSEL**

Følgende operationer bør kun udføres på modulet i spændingsløs tilstand og under ESD-sikre forhold. Installation, ledningsmontage og -demontage. Fejfindning på modulet. Reparation af modulet må kun foretages af PR electronics A/S.

UK**WARNING**

The following operations should only be carried out on a disconnected device and under ESD safe conditions:
General mounting, connection and disconnection of wires. Troubleshooting the device.
Repair of the device must be done by PR electronics A/S only.

FR**AVERTISSEMENT**

Les opérations suivantes doivent être effectuées avec le module débranché et dans un environnement exempt de décharges électrostatiques (ESD): montage général, raccordement et débranchement de fils et recherche de pannes sur le module.
Seule PR electronics SARL est autorisée à réparer le module.

DE**WARNING**

Følgende Maßnahmen sollten nur in spannungslosem Zustand des Gerätes und unter ESD-sicheren Verhältnissen durchgeführt werden: Installation, Montage und Demontage von Leitungen. Fehlersuche im Gerät. Und Reparaturen des Gerätes dürfen nur von PR electronics A/S vorgenommen werden.

SIKKERHEDSREGLER

Mottagelse og udpakning
Udpak modulet uden at beskadige det. Kontroller ved mottagelsen, at modultypen svarer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på tilhørende plads.

Miljøforhold
Undgå direkte sollys, kraftigt støv eller varme, mekaniske vibraser og stød, og udset ikke modulet for regn eller kraftig fugt. Om nødvendigt skal opvarmning, ud over de opgivne grænse for omgivelserstemperatur, forhindres ved hjælp af ventilation.

Installation
Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendte med de tekniske udtryk, advarsler og instruktioner i installationsvejledningen, og som vil følge disse. Hvis der er tvivl om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler eller alternativt direkte til PR electronics A/S.

Installation og tilslutning af modulet skal følge landets gældende regler for installation af elektrisk materiel bl.a. med henvis til ledningstværn, forsikring og placering. Beskrivelser af indgang / udgang og forsyningsforbindelser beskrives i produktmanuallen, som kan hentes på www.prelectronics.dk.

Kalibrering og justering
Under kalibrering og justering skal måling og tilslutning af eksterne spændinger udføres i henhold til denne installationsvejledning, og teknikeren skal benytte sikkerhedsmæssigt korrekte værktøj og instrumenter.

Rengøring
Modulet må, i spændingsløs tilstand, rengøres med en klud let fugtet med destilleret vand.

SAFETY INSTRUCTIONS**Receipt and unpacking**

Unpack the device without damaging it. The packing should always follow the device until it has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

Mounting

Only qualified technicians who are familiar with the technical terms, warnings, and instructions in this installation guide and who are able to follow these should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively, PR electronics A/S.

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in the product manual found on www.prelectronics.com.

Calibration and adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this installation guide. The technician must use tools and instruments that are safe to use.

Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

PC programming of SYSTEM 5300

The device is configured to the present task by way of a PC and PR electronics A/S' communications interface Loop Link. The device can be configured with or without a connected computer. The communication interface couples the necessary voltage to the communication interface. The communications interface is galvanically isolated to protect the PC port. Communication is 2-way to allow the retrieval of the device set-up into the PC and to allow the transmission of the PC set-up to the device. For users who do not wish to do the set-up themselves, the device can be delivered configured according to customer specifications: input type, measurement range, sensor error detection, and output signal.

Electrical specifications

Specifications range -40°C to +85°C

Forsyningsspænding, 5331A, 5332N, 5332A 7,2...35 VDC

Intern effekt, 5331A, 5332A & 5334A 25 mW...0,8 W

Forsyningsspænding, 5331D, 5332D & 5334B 7,2...30 VDC

Intern effekt, 5331D, 5332D & 5334B 25 mW...0,7 W

*Isolationsspænd, test/opér. 1,5 kVAC / 50 VAC

Kalibreringsstemperatur 20...28°C

Relativ fugtighed < 95% RH (nicht kond.)

Dimensions Ø44 x 20,2 mm

Protection degree (encl./terminal) IP68 / IP00

Input types:

Pt100 -200°C...+850°C

Ni100 -60°C...+250°C

TC input B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

Lin, R 0...5000 0

Spænding (hus/klemme) 0...20,0 mm

Indgangstyper:

Pt100 -200°C...+850°C

Ni100 -60°C...+250°C

TC-indgang B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

Lin, R 0...5000 0

Spænding -12...800 mV

Current output:

Signal range 4...20 mA

Min. signal range 16 mA

Load resistance, Ω ≤ (Vsupply/7.2V)/0.023

Approvals:

*DNV-GL, Ships & Offshore.. Stand. f. Certific. No. 2.4

*EAC TR-CU 020/2011

*EAC Ex TR-CU 012/2011

Observed authority requirements:

EMC 2014/30/EU

ATEX 2014/34/EU

RoHS 2011/65/EU

* Does not apply to 5332

Compatibilité avec les normes:

CEM 2014/30/EU

ATEX 2014/34/EU

RoHS 2011/65/EU

* Pas applicable pour le 5332

Stromdugang:

Signalområde 4...20 mA

Min. signalområde 16 mA

Belastningsmodstand, Ω ≤ (Vsyst/7.2V)/0.023

Godkendelser:

*DNV-GL, Ships & Offshore.. Stand. f. Certific. No. 2.4

*EAC TR-CU 020/2011

*EAC Ex TR-CU 012/2011

Overholdte myndighedskrav:

EMC 2014/30/EU

ATEX 2014/34/EU

RoHS 2011/65/EU

* Gælder ikke for 5332

EINGANGS-TYPEN:

Pt100 -200°C...+850°C

Ni100 -60°C...+250°C

TE-Eingang B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

Lin, R 0...5000 0

Spannung -12...800 mV

Sortie courant:

Gamme de signal 4...20 mA

Plage de signal min. 16 mA

Résistance de charge, Ω ≤ (Vsyst/7.2V)/0.023

Approbations:

*DNV-GL, Ships & Offshore.. Stand. f. Certific. No. 2.4

*EAC TR-CU 020/2011

*EAC Ex TR-CU 012/2011

Compatibility avec les normes:

CEM 2014/30/EU

ATEX 2014/34/EU

RoHS 2011/65/EU

* Pas applicable pour le 5332

Zulassungen:

*DNV-GL, Ships & Offshore.. Stand. f. Certific. No. 2.4

*EAC TR-CU 020/2011

*EAC Ex TR-CU 012/2011

EINGEHALTENE BEHÖRDENVORSCRIFTEN:

EMV 2014/30/EU

ATEX 2014/34/EU

RoHS 2011/65/EU

* Nicht gültig für 5332

DK**UK****FR****DE****Zulassungen****BR****Aprobaciones****DK****UK****FR****DE****Zulassungen****BR****Aprobaciones****DK****UK****FR****DE****Zulassungen****BR****Aprobaciones****DK****UK****FR****DE****Zulassungen****BR****Aprobaciones****DK****UK****FR****DE****Zulassungen****BR****Aprobaciones****DK**


ATEX Installation drawing 5331QA01-V2R0

For safe installation of 5331D or 5334B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 06ATEX 0062 X

Marking II 1 G Ex ia IIC T4...T6 Ga
II 1 D Ex ia IIC Da
I M1 Ex ia I Ma

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-26 : 2007, EN 60079-15 : 2010

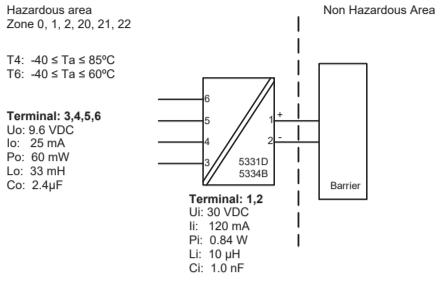

Installation notes

The sensor circuit is not intrinsically galvanically isolated from the input circuit. However, the galvanic isolation between the circuits is capable of withstanding a test voltage of 500Vdc during 1 minute.

In a potentially explosive gas atmosphere, the transmitter shall be mounted in an enclosure in order to provide a degree of protection of at least IP20 according to EN60529.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment of category 1 G, 1 M or 2 M, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the enclosure is made of non-metallic materials, electrostatic charging shall be avoided.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter shall be mounted in a metal enclosure form B according to DIN43729 that is providing a degree of protection of at least IP6X according to EN60529, that is suitable for the application and correctly installed.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The surface temperature of the enclosure is equal to the ambient temperature plus 20 K, for a dust layer with a thickness up to 5 mm

ATEX Installation drawing 5331QA02 – V2R0


For safe installation of 5331A3B or 5334A3B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 10ATEX 0002 X

Marking II 3 G Ex nA [ic] IIC T4...T6 Gc
II 3 G Ex ic IIC T4...T6 Gc
II 3 D Ex ic IIC Dc

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-15 : 2010

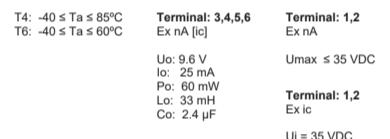

Special conditions for safe use.

For type of protection Ex nA, the transmitter shall be mounted in a metal enclosure providing a degree of protection of at least IP54 according to EN60529.

For use in the presence of combustible dusts the transmitter shall be mounted in an enclosure providing a degree of protection of at least IP6X in accordance with EN60529, the surface temperature of the outer enclosure is 20 K above the ambient temperature.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

ATEX Installation drawing 5332QA01-V1R0


For safe installation of 5332D the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international law, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 06ATEX 0062 X

Marking II 1 G Ex ia IIC T4...T6 Ga
II 1 D Ex ia IIC Da
I M1 Ex ia I Ma

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-26 : 2007, EN 60079-15 : 2010

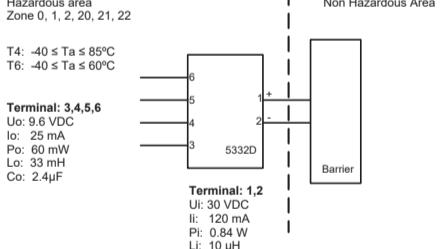

Installation notes

In a potentially explosive gas atmosphere, the transmitter shall be mounted in an enclosure in order to provide a degree of protection of at least IP20 according to EN60529.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment of category 1 G, 1 M or 2 M, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the enclosure is made of non-metallic materials, electrostatic charging shall be avoided.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter shall be mounted in a metal enclosure form B according to DIN43729 that is providing a degree of protection of at least IP6X according to EN60529, that is suitable for the application and correctly installed.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The surface temperature of the enclosure is equal to the ambient temperature plus 20 K, for a dust layer with a thickness up to 5 mm.


For safe installation of 5331D or 5334B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate KEMA 06ATEX 0062 X

Marking II 1 G Ex ia IIC T4...T6 Ga
II 1 D Ex ia IIC Da
I M1 Ex ia I Ma

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-26 : 2007, EN 60079-15 : 2010

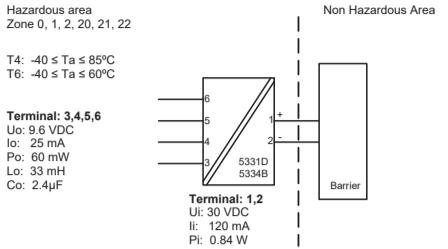

IECEx Installation drawing 5331QI01-V1R0

For safe installation of 5331D or 5334B the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.


Certificate IECEx DEK 13.0035X

Marking Ex ia IIC T4...T6 Ga

Ex ia IIC Da

Ex ia I Ma

Standards IEC 60079-0 : 2011, IEC 60079-11 : 2011, IEC 60079-26:2006

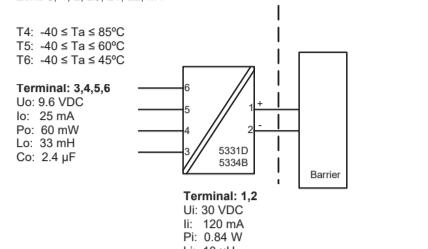

Installation notes

The sensor circuit is not intrinsically galvanically isolated from the input circuit. However, the galvanic isolation between the circuits is capable of withstanding a test voltage of 500Vdc during 1 minute.

In a potentially explosive gas atmosphere, the transmitter shall be mounted in a metal form B enclosure in order to provide a degree of protection of at least IP20 according to IEC60529. If however the environment requires a higher degree of protection, this shall be taken into account.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, Ma and Mb, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the enclosure is made of non-metallic materials, electrostatic charging shall be avoided.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter shall be mounted in a metal enclosure form B according to DIN43729 that is providing a degree of protection of at least IP6X according to IEC60529, that is suitable for the application and correctly installed.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The surface temperature of the enclosure is equal to the ambient temperature plus 20 K, for a dust layer with a thickness up to 5 mm

ATEX Installation drawing 5332QA02 – V1R0

For safe installation of 5332A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.


ATEX Certificate KEMA 10ATEX 0002 X

Marking I 3 G Ex nA [ic] IIC T4...T6 Gc

I 3 D Ex ic IIC T4...T6 Gc

I 3 D Ex ic IIC Dc

Standards EN 60079-0 : 2012, EN 60079-11 : 2012, EN 60079-15 : 2010

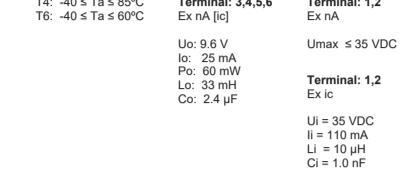

Special conditions for safe use.

For type of protection Ex nA, the transmitter shall be mounted in a metal enclosure providing a degree of protection of at least IP54 according to EN60529.

For use in the presence of combustible dusts the transmitter shall be mounted in an enclosure providing a degree of protection of at least IP6X in accordance with EN60529, the surface temperature of the outer enclosure is 20 K above the ambient temperature.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.

The transmitter is not intrinsically galvanically isolated from the input circuit.

The surface temperature of the outer enclosure is 20 K above the ambient temperature.